



# GEOMETRICS

Innovation • Experience • Results

## G-858

## MAGMAPPER

25309-OM REV. D2

# *Operation Manual*

COPYRIGHT © JANUARY 2001

**GEOMETRICS, INC.**

2190 Fortune Drive, San Jose, CA 95131 USA

Phone: (408) 954-0522

Fax: (408) 954-0902



CE

97

December 3, 1996

Sunnyvale, California, USA

## EC DECLARATION OF CONFORMITY

We, Geometrics, Inc.  
Geometrics Europe  
395 Java Dr.  
Sunnyvale, CA 94089 USA ph:  
(408) 734-4616 FAX: (408) 745-  
6131

declare under our sole responsibility that our portable magnetometers, models G-858 and G-858G to which this declaration relates are in conformity with the following standards:

EN61010-1 :1993/A2: 1995

per the provisions of the **Low Voltage Directive 73/231EEC** of 19 February 1973 as Amended by **93/68/EEC**, **Article 13** of 22 July 1993 and,

EN 55022: 1995, EN50082-2 : 1995, ENV 50140: 1994, ENV 50141 :1994, EN  
61000-4-2: 1995, EN 61000-4-4: 1995

per the provisions of the **Electromagnetic Compatibility Directive 8913361EEC** of May 1989 as Amended by **92131/EEC** of 28 April 1992 and **93/68-EEC**, **Article 5** of 22 July 1993.

The Technical documentation required by Annex IV(3) of the Low Voltage Directive is maintained by Christopher Leech of Geometrics Europe (address below).

The authorized representative located within the Community is:

Geometrics Europe  
Christopher Leech Manor  
Farm Cottage Galley Lane  
Great Brickhill Bucks.MK17  
9AB, U.K. ph: +44 1525  
261874 FAX: +44 1525  
261867



Steven W. Duckett, President, Sunnyvale, CA, USA

**Warning**

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## Table of Contents

<b>CHAPTER 1: INTRODUCTION .....</b>	<b>1</b>
Overview .....	1
Applications .....	2
Features .....	2
Modes of Operation .....	3
Magnetic Surveying Checklist .....	4
 <b>CHAPTER 2: SET UP AND OPERATION.....</b>	 <b>6</b>
Unpacking your G-858 .....	6
Assembly .....	7
Cesium Sensor Orientation .....	12
Operating the G-858 .....	13
Setting up the G-858 .....	17
Warming up the G-858.....	18
Gradiometer Operation.....	20
Self Test .....	22
 <b>CHAPTER 3: SEARCH MODE.....</b>	 <b>25</b>
Search Mode.....	25
Search Mode Adjust Menu .....	26
Pop up Menus.....	27
 <b>CHAPTER 4: SIMPLE SURVEY MODE.....</b>	 <b>28</b>
Simple Survey.....	28
Survey Overview .....	28
Setting up a Simple Survey .....	29
Acquiring Data.....	30
Adjust Menu.....	33

Pop up Menus.....	33
Pausing.....	34
Editing Data .....	35
Viewing Data.....	37
<b>CHAPTER 5: MAPPED SURVEY.....</b>	<b>39</b>
Introduction .....	39
Setting up the survey .....	39
Defining the Survey Area.....	40
MAGMAPPER MAPPED SURVEY MODE - PARALLEL TO Y AXIS.....	42
MAGMAPPER MAPPED SURVEY MODE - PARALLEL TO X AXIS.....	43
Acquiring Data.....	44
Acquire Menu .....	45
Displaying the Map.....	46
Map Menu .....	47
Viewing Data.....	48
Editing Data .....	50
Examples - Recovering From Common Mistakes:.....	50
Summary.....	51
Defining a Physical Area .....	51
Advanced Features .....	55
<b>CHAPTER 6: BASE STATION.....</b>	<b>61</b>
Setting up a Base Station Survey.....	62
Acquiring Data.....	62
<b>CHAPTER 7: DATA REVIEW.....</b>	<b>64</b>
Chart Display .....	65
Data Review Menu.....	67

<b>CHAPTER 8: DATA TRANSFER .....</b>	<b>68</b>
PC Controlled Transfer.....	68
Manual Ascii Transfer .....	69
Erasing a Data Set .....	70
<b>CHAPTER 9: GPS.....</b>	<b>71</b>
Overview.....	71
Collecting GPS data.....	72
Using GPS data .....	72
<b>CHAPTER 10: SYSTEM SETUP .....</b>	<b>73</b>
Audio.....	73
Date & Time .....	73
Com Port Setup.....	73
Com & Field Note Setup.....	73
Magnetometer Test.....	73
Real Time Transfer.....	74
Serial Port (Use COM 1 as:) .....	74
Storing Serial Data (Store serial data:).....	75
QC Warning Level: .....	75
Graphic Display .....	76
Audio Setup .....	77
Setting the Date and Time.....	78
COM Port Setup Menu .....	79
External RS232 and Field Note Setup.....	80
Magnetometer Test.....	82
<b>CHAPTER 11: MAGMAP2000 SOFTWARE .....</b>	<b>83</b>
<b>APPENDIX 1: SURVEYING PRINCIPLES.....</b>	<b>84</b>

<b>Guidelines for Small Ground Magnetometer Surveys.....</b>	<b>84</b>
<b>Number of People.....</b>	<b>84</b>
<b>Survey Efficiency .....</b>	<b>84</b>
<b>Layout of the Survey Track .....</b>	<b>85</b>
<b>Diurnal Correction .....</b>	<b>85</b>
<b>Survey Accuracy .....</b>	<b>86</b>
<b>Survey Credibility.....</b>	<b>86</b>
<b>Location of Small Objects Within Associated Anomalies.....</b>	<b>87</b>
<b>APPENDIX 2: CSAZ.....</b>	<b>88</b>
<b>APPENDIX 3: ADVANCED INFORMATION .....</b>	<b>98</b>
<b>Memory Usage .....</b>	<b>98</b>
<b>File Formats .....</b>	<b>98</b>
<b>I/O Connector Pinout .....</b>	<b>102</b>
<b>Power Connector Pinout .....</b>	<b>102</b>
<b>Field Notes .....</b>	<b>103</b>
<b>EM-61 Data .....</b>	<b>103</b>
<b>SYSTEM SPECIFICATIONS .....</b>	<b>105</b>



## Chapter 1: Introduction

### Overview

The model G-858 is a professional quality magnetic mapping tool offering exceptional speed and efficiency. The system presents a “Quick Look” to the operator of up to 5 stacked survey profiles, *as well as a graphical map of the survey grid showing surveyed and unsurveyed portions*. Data is stored in non-volatile memory for playback review and downloading into a host PC. The system includes a comprehensive software package to download, edit and interpolate magnetic data into 2D or 3D contour-ready formats. Hard copy annotated color maps can be produced within minutes after data transfer to the base computer.

The G-858 includes three unique features, each intended to assist the collection of magnetic data. First, the system lets you visualize the survey area beforehand, entering in the desired survey location points. Second, it lets you review your locations and your data during the survey. Finally, the unit allows you to edit data, both in the field and in later processing.



## Applications

The G-858 MagMapper may be used to locate buried drums or other underground storage containers; to find pipelines, well-heads and other utilities; to search for unexploded ordnance, discarded weapons or magnetic mines; to look for graves or archeological sites; to study geological structures and faults; to find mineral deposits and aid in the siting of mines and quarries, etc. The fast response of the instrument means that the data may be taken at a brisk walking pace which efficiently covers four to ten times as much ground per hour as prior magnetometers. The high sensitivity means that many potential targets (including voids) which would have been missed with other techniques will stand out clearly and unambiguously.

## Features

The G-858 has been designed to greatly simplify magnetic surveying. All of its features are intended to speed up the surveying process and reduce the possibility of mistakes. Toward that end, the following features have been incorporated into the G-858:

- Continuous surveying, where the unit automatically records data at a user-selectable rate, up to 10 readings per second.
- Discrete surveying, where the unit takes a reading upon an operator key-press.
- Four modes of operation: search mode, for performing a random search for anomalies or system test; simple survey, for a simplified method of operation; mapped survey, for the full capability of defining and tracking position as readings are taken; and base station, for collecting data to be used for diurnal corrections.
- Real-time analog sweep display of the current magnetometer reading.
- Up to five separate surveys stored independently.
- Map displays, showing the survey area, with readings plotted in the correct locations.
- Data profile displays, allowing previous data to be reviewed.
- Data editing capability, where data may be deleted and retaken.
- Downloading of data in compressed format to a host PC.
- Host software for editing data positions, and writing a file for 3D surface plotting with 3rd party software, such as WinSurf or GeoSoft.
- Audible tones indicating the field change over the local target, warning of non-valid data, indicating that data was taken and stored, and that location keys have been pressed.
- Storage capacity for more than 250,000 readings and positions, each recorded with the time of the event.
- Logging of data from an RS-232 input port (for example, GPS data).
- Logging of user-defined field notes.

## Modes of Operation

Here we present an overview of the modes of operation, along with their advantages and when each should be used.

### Search Mode

In Search mode, the magnetometer operates normally, displaying an analog oscilloscope-like trace, with an audible sound whose pitch indicates changes in the field reading (the "woowee" indicator). However, data is not stored in memory. This is useful for manually identifying anomaly locations, much as with a metal detector. It is also useful to check for proper sensor operation and ambient magnetic noise.

### Simple Survey Mode

In simple survey mode, the unit keeps track of MARK (start line, and waypoints) and END LINE (end of line) key presses, and the direction of each line. This allows a full and complete survey. Later, after downloading the data into the PC, the MagMap program will attach an x and y coordinate to each reading.

Simple survey mode allows the simplest operation of the G-858, at the expense of a slightly more complicated operation of the PC host software. You must manually keep track of where you are taking data, and enter this information into the host software to locate the readings.

### Mapped Survey Mode

Mapped survey allows you to better visualize the survey area than simple survey, and move around within the area in a non-continuous fashion. Using the arrow keys, you may position the cursor anywhere within the map and acquire data. Default cursor movements are programmed into the unit, so if you follow a normal path across the survey area, you may simply press the MARK and END LINE keys as if you were doing a simple survey.

This method allows the easiest operation of the PC host software. You must enter more information into the G-858, however. This mode will track your position for you automatically, assuming you are following a simple path, while also allowing you to change your position manually, when, for example, you reach an obstruction and wish to start again on the other side.

### Base Station Mode

In base station mode, the unit will not keep track of changes in position. This is most useful when the unit is being used to collect data for diurnal correction. Both data and the time of the readings are stored in internal memory.

In addition, this mode supports a real-time transfer of data out of the RS232 port as it is being acquired. This is useful if you are using another PC to collect and process the data, for instance, when using the G-858 from a mobile platform. Of course, you may also store the data inside the G-858, with or without real-time transfer.

## Magnetic Surveying Checklist

Here we give a quick checklist for performing a magnetic survey. Please see Appendix 1 if you are unfamiliar with magnetic surveying. Subsequent chapters will explain in detail the operation of the G-858 during the survey.

### 1. Setting up the survey grid

- Designate an individual to be responsible for making a sketch of the survey site, with notes and comments on all relevant objects such as power lines, fences, pipes, and surface debris.
- Establish a base line, which will provide the start or end points for all profile lines. Designate the left hand corner of the base line to be (0,0) for the X and Y axes. Note that the survey lines can run in any direction, but if a choice exists, the preferred direction would be North and South.
- Using the smallest search target size, determine the separation of the profile lines. For small targets such as a one pound ferrous mass with worst case shape and orientation, lines spaced 2 meters apart is a good initial choice.
- Place non-magnetic, brightly colored markers at the start and stop of each profile. If the lines are long or require irregular walking speeds, place a marker at regular intervals (perhaps each 20 or 50 meters) along the profile. These will become fiducial or waypoint entries in the data stream.
- If the survey is to be broken into separate but adjacent areas, it will help you to stitch the sections together if there is at least one profile line of overlap. Also insure that the profiles extend beyond the actual survey boundary by at least 2 or 3 times the estimated target depth.
- Locate the survey area corners and reference them to other surface objects. If the site will be relocated in the future, it may be useful to permanently mark the corners with an iron stake (re-bar) driven down to ground level. Note that these corner stakes are the only magnetic objects that are used on the entire survey site. Flags, cones, stakes and other markers must be carefully inspected to be non-magnetic.

2. Turn on and warm up the G-858, using the procedure described in Chapter 2.. Select the Search Mode, and adjust the sensor for the proper operating orientation, i.e. there should be continuous signal and correct instrument operation in all directions of the survey profiles. The program CSAZ will help to determine the best sensor orientation to avoid dead zones.

3. Demagnetize the magnetometer operator. Using the G-858 in the Search Mode, insure that the operator does not contribute an error greater than 1 nT in any direction. (Refer to the Applications Manual, chapter 4 for a fast, simple, "magnetic swing" procedure that will measure the operator's magnetic cleanliness.) Pay particular attention to the operator shoes, eye glasses, and the removal of rings, keys, belt buckle, and all pocket items. Only a small amount of magnetic material is needed to seriously distort the magnetic data. (Shoes are always suspect and are the closest moving parts to the sensor.)

4. Select a survey "Test Profile" line. This profile should be run in each direction at the start and end of each survey day as a check of data repeatability and quality. It is an excellent check of proper system operation and may be useful as "proof of operation" to the end user.


5. Perform the data acquisition for all survey profiles and record the direction of each profile on the survey sketch map. Also record the start and end locations and the direction of the first and last survey profiles for each survey day. This may be duplication of effort, but is independent of the data logged in the instrument and may be very helpful in editing the data during processing.

6. During the course of the survey it is important that the operator has adequate support in finding and staying on the line. However, if the operator is disrupted during data acquisition, the G-858 easily allows data to be deleted and/or retaken. The G-858 has been designed to reduce mistakes and save money.

7. Finally, at the end of the survey, download the data to your host PC via the RS-232 port, edit the positions if necessary, perform diurnal corrections, and convert the file to a suitable output for 3rd party software, such as Surfer for Windows or Geosoft. An example of processed data is shown below.

Surfer for Windows output for an example survey site.

**Stanford University Environmental Test Site  
Very High Resolution G-858 Cesium Magnetometer Data  
Deployed on Cart, Dual Sensors, GPS Positioning**

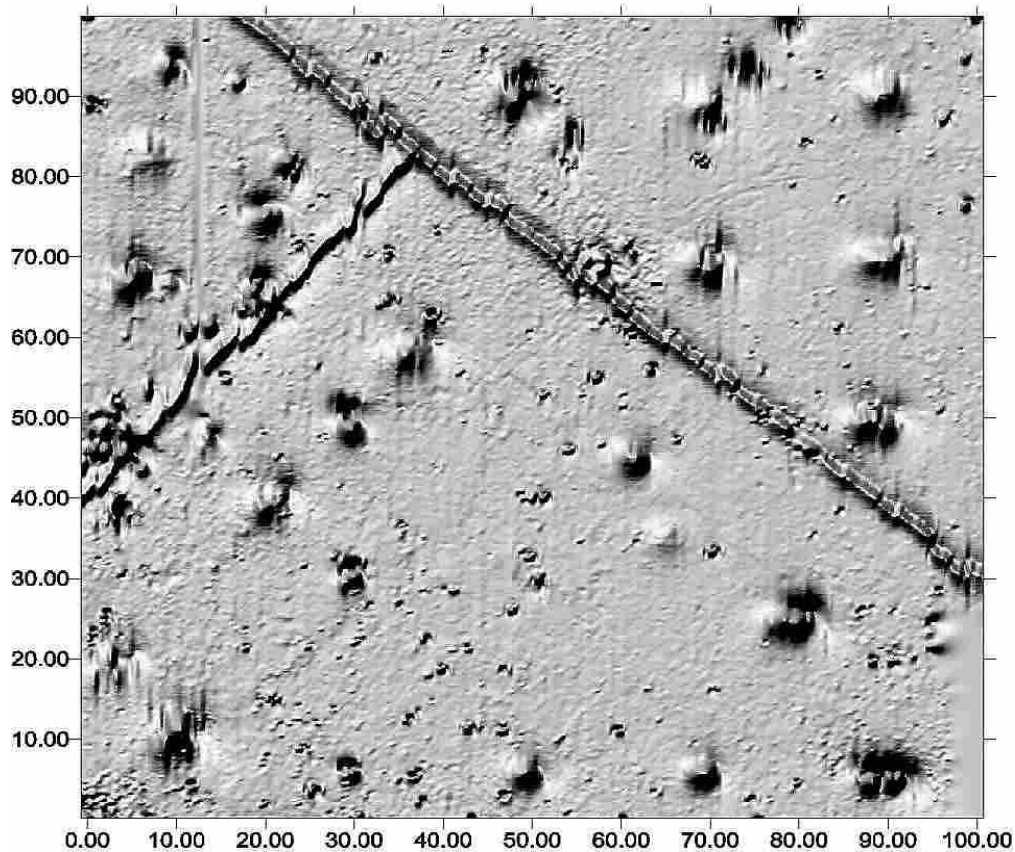

## Chapter 2: Set Up and Operation

This chapter gives an overview of the entire surveying process. It will describe how to set up the instrument, operate in the *Simple Survey* mode, and download the data into the PC for analysis. Please read Chapter 3 as soon as you can to find out more about your G-858 magnetometer.

### Unpacking your G-858

The instrument is shipped in a rugged container, with each element carefully packed in foam cells. Please remove all the items in the case. The tables below show the items that should be included.

Part Number	Name	Description
0025306-01	Console	Main magnetometer console, containing electronics, keypad, and display
0025307-02	Battery belt (2 included)	Battery belt for easy carrying of the system batteries. Batteries are installed in the belt
0025332-01	Shoulder harness	Distributes the load of the batteries and console
0025366-04	Battery charger	Charges the batteries
0025386-01	Holster	Holds the end of the staff in vertical mode
0025349-14	Sensor staff assembly	Connect together to form a staff of the desired length and balance the sensor weight
0025367-01	Sensor clamps	Hold the sensor to the staff
0025369-01	Strap clamp assembly	Staff strap connection
0027516-10	Sensor and Sensor Cable	Measures the magnetic field
0025358-01	Serial cable	Carries data from the G-858 to the PC
0025382-01	Auxiliary belt assembly	Provides more flexibility in positioning sensor staff for greater comfort
28-806-003 0027573-01	Velcro cable locks and cable hanger	Keep the sensor cable neatly attached to the staff
40-304-002	Adapter plug kit	Adapts to various AC power standards
0025376-01	Fuse assembly	Extra fuses for battery belt
0018134-01	Application manual	Describes principles of magnetic surveying
0025309-OM	Operation manual	This document
26648-01	MagMap PC software	Used to download data to host PC, modify positions, and write output files.
0025391-02	Shipping case	Storage and shipping of the G-858

Items included in G-858.

The following additional items are included with G-858 gradiometers.

0016552-02	Staff “tee” piece	Holds the cross piece at the end of the staff
0016536-05	Cross piece	Forms the perpendicular piece to the staff
0025382-01	Auxiliary belt	Supports the extra weight of the staff
0016539-03	Large counter weight	Replaces the smaller counter balance

## Assembly

The photograph below depicts the G-858 in normal usage.





### **Sensor Staff**

The sensor staff consists of 3 identical sections. The sections plug into each other, and are held in place by rubber cams. Plug them together by aligning the cam with the shaft, giving a 1/2 turn twist to lock them together. Install the sensor clamp (with short piece of tubing) with strap clamp on one end of the staff, and the counter balance on the other. Clip the strap to the counterbalance.



### G-858 Console

The G-858 console is pictured below. The slots in the spreader bar are designed to slip over the battery belt. The holes are for attaching the front shoulder straps. The connectors are for the power cable, I/O port, and 2 cesium magnetic sensors.




G-858 Console. The upper left connector is the battery connector, the upper right is the serial I/O port, and the two lower connectors are for the sensors. The right-hand sensor connector is used for single magnetometer operation, for the top sensor in the vertical gradient mode of operation, and for the left sensor in the horizontal gradient mode.


### Wearing the G-858

The G-858 is designed for comfortably carrying the batteries, console, and sensor while making a magnetic survey.

1. Attach the rear shoulder straps to the battery belt. The hooks on the straps attach to the triangular rings above the batteries. The front and rear straps both adjust, so you can position the straps most comfortably. The Velcro fasteners go over the right shoulder.
2. Put the battery belt around your waist. The belt is adjusted with the sliding lock on the left hand side. Due to the stiffness of the webbing, this may be slightly inconvenient, but will need to be adjusted only once for a particular operator. The belt may be easily taken off by unclipping the bracket.
3. Slide the console onto the front of the battery belt, threading the webbing through the slots. You may find it convenient to thread the extra belt length through the console slots as well. Connect the battery cable between the battery belt and the console.

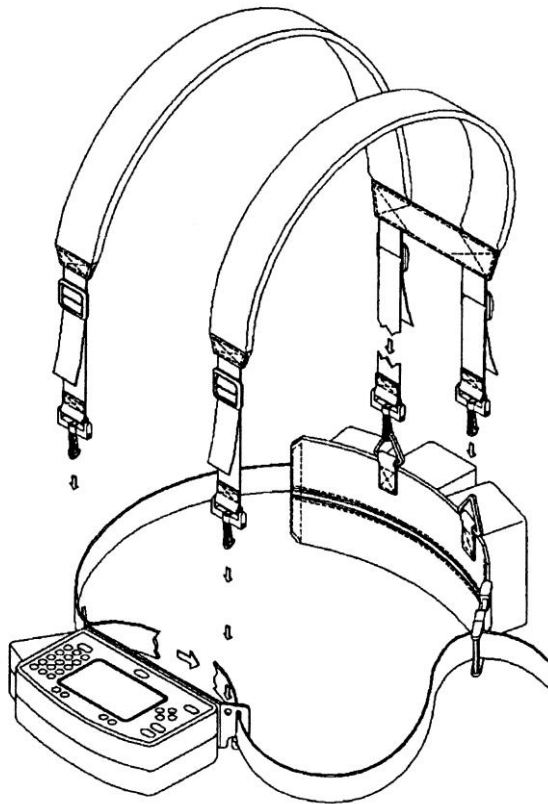

4. Bring the shoulder straps over your shoulders and connect them to the holes on the console. The adjustments at the front and rear of each strap allow you to position the straps most comfortably. If the straps tend to get pulled off your shoulders, it may be more comfortable to cross them in front. See the photos below.

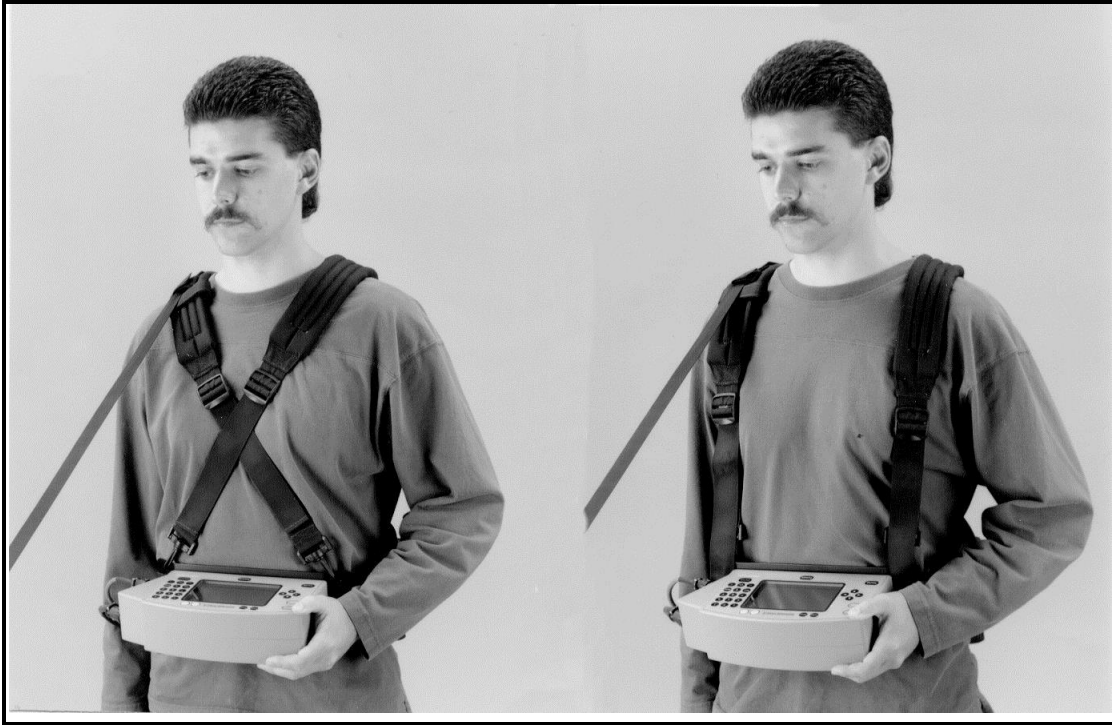

5. The sensor staff strap now should go over your right shoulder. This is recommended even for left handed people as the cables come out of the right side of the console. Thread the staff strap through one or more of the Velcro catches on the shoulder strap. This will keep the strap from tending to slide off of the shoulder.
6. Connect the sensor cable to the console (see the picture on p. 9 to determine which connector(s) on the console to use). Use the Velcro cable locks to attach the length of cable to the staff, so it doesn't dangle and get in your way.
7. If you wish to hold the sensor staff vertically, take out the counter balance and use the staff holster provided to support the end of the staff. The large Velcro strap on the right shoulder harness may be used to hold the staff in the vertical position.

---


**Note:** To remove the system, first unclip the battery belt clasp. Then lift the unit over your head by the tops of the shoulder straps, leaving the console attached to the battery belt.

---

### Cesium Sensor Orientation

A cesium sensor is insensitive to magnetic fields in certain directions. This is due to the nature of the operation of the sensor. If the magnetic field direction is within 15 degrees of the optical centerline of the sensor, or within 15 degrees of the plane perpendicular to that (the equatorial plane), the sensor will read 0.00 for the magnetic field value. See the sketch below.

A program is provided to help you determine what orientation is best for the sensor, given the dip angle of the Earth's magnetic field where the survey will be taking place. See Appendix 2 for more details.

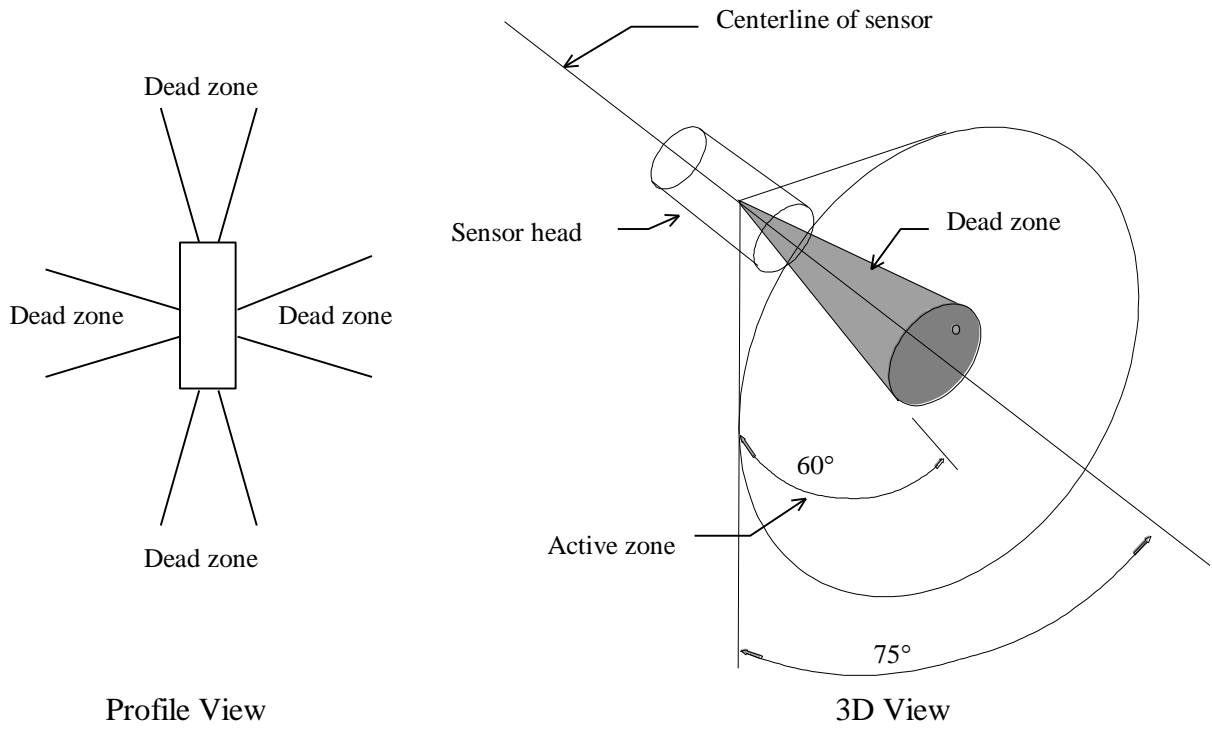

## Operating the G-858

### Charging the Batteries

Use the supplied charger to charge the batteries before use. A full charge will take about 6-8 hours. Connect the battery charger directly to the cable coming out of the battery belt. Two battery belts are supplied so you can continue working after one has discharged. The unit will operate 6 hours on one charge, so with two belts, you can work up to 12 hours ( at 25° C). As a gradiometer, battery life is reduced to 3.5 hours. At -10° C, battery life is further reduced 33 %.

---

**Note:** To best maintain battery life, you should periodically charge the batteries (about every 4 months) if the unit is not in use.

---

### Powering on and off.

After charging the battery, connect the console to the battery belt cable. This cable may be tucked into the pouch in the battery belt when not in use.

Press the POWER key to power the unit up. You may need to adjust the display contrast (keys marked LIGHT and DARK) in order to see the display. The menu first shown is the Main Menu:

```

          ---MAIN MENU V1.12---

          Use arrow key to select desired
          function.  Confirm with "ENTER"

Select Sensor Type:

          MAGNETOMETER

          OHMMAPPER

          SELF TEST

hh:mm:ss   mm/dd/yy   Memory free 99.9%
```

Pressing the POWER key when the Main Menu is displayed will shut the unit off. This logging console is used with two of Geometrics' products, the G-858 Magnetometer and the Ohmmapper. If the either MAGNETOMETER or OHMMAPPER menus have been selected from this menu, the POWER key will also shut the unit off in those menus. At other times, the POWER key is ignored

---

**Note:** To shut the unit off, press ESC until the MAIN MENU, G-858 MAGNETOMETER or OHMMAPPER menus are shown, then press POWER.

---

Try not to disconnect the battery cable during use. If the battery cable is disconnected, some of the most recent data may be lost. Every effort has been made to protect your data in this event. However, depending upon what the microprocessor was doing at the time power was interrupted, data corruption may occur.

The unit will power itself off when the batteries reach a low voltage condition. Data back to the last position marker will be lost, however.

---

**Note:** The gauges on the left of the display show the battery power and memory left in the G-858. You should keep track of these indicators.

---

High-pitched sounds coming from the G-858 are normal. Capacitors used on the internal circuit boards exhibit a piezo-electric effect, and create the buzzing noises.

---

**Note:** You should allow the sensor to warm up for 5 to 15 minutes before starting the survey, depending upon ambient temperature. During the warm up period, the unit may display an “inoperative sensor” message. If this happens, simply unplug the sensor and plug it back in, or cycle the power of the G-858. See the later section “Warming up the G-858” later in this chapter for the proper procedure.

---

## Using the menus

### Selecting fields in a menu

Menu fields are highlighted by pressing the up and down arrow keys. There are 3 types of fields which may be highlighted.

#### Scroll list.

A scroll list is indicated by the angle brackets, < >, on each side (see the “Baud rate” field in the menu example below). Press the left and right arrow keys to scroll through a list of options. You do not need to press the ENTER key. Simply move out of the field with the up or down arrow key, or press ESC to move up an entire menu level.

#### Numeric entry field.

A numeric entry field is indicated by square brackets, [ ], on each side (see the “QC warning level” field in the menu example below). Press the DEL key to delete the number that is there, type a new number, and press ENTER. Using the up and down arrow keys to move out of this field without first pressing ENTER will cause the numeric value to return to the last value.

---


**Note:** Don't forget to press the ENTER key after entering the desired value. You can also move the cursor within a field by pressing the arrow keys to select and change individual digits.

---

#### Function calls.

Function calls are indicated by a text only box, with no angle or square brackets ( see the AUDIO, DATE & TIME, and SELF TEST fields in the menu example below). Pressing ENTER in these fields will cause the indicated action to occur.

#### Menu Example:

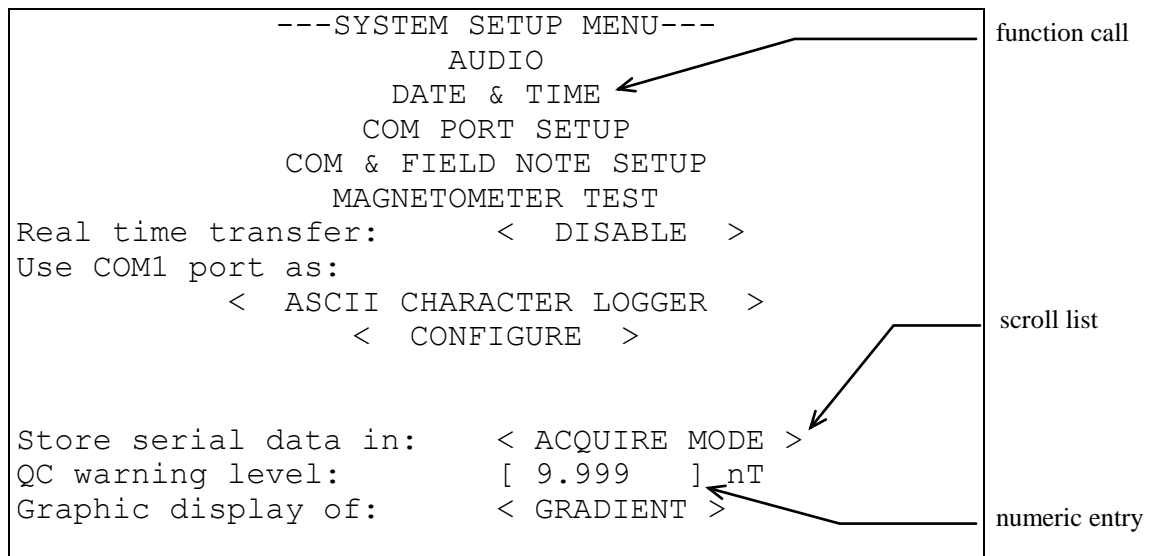

### Moving through menus

In this document, “selecting” an item means highlighting it with the arrow keys and pressing ENTER. “Scrolling” to a value refers to highlighting the field item and pressing the left or right arrow keys until the desired value is displayed.

Press the ESC key to back up a menu level.

The first menu displayed on power up is the main menu, shown below.

```

---MAIN MENU V1.12---

Use arrow key to select desired
function. Confirm with "ENTER"

Select Sensor Type:

MAGNETOMETER

OHMMAPPER

SELF TEST

hh:mm:ss mm/dd/yy Memory free 99.9%
```

Main Menu

From this Main Menu press the arrow key until MAGNETOMETER is highlighted and press ENTER to select G-858 Magnetometer operation. The following menu will appear.

```

---G858 MAGNETOMETER V3.04---

Use arrow keys to select desired
function. Confirm with "ENTER"

SEARCH MODE

SIMPLE SURVEY

MAPPED SURVEY

BASE STATION

DATA REVIEW

DATA TRANSFER

SYSTEM SETUP

hh:mm:ss mm/dd/yy Memory free: 99.9%
```

G-858 Magnetometer menu.



## Setting up the G-858

Select the SYSTEM SETUP from the main menu. You will then see the system setup menu.

```

---SYSTEM SETUP MENU---
      AUDIO
      DATE & TIME
      COM PORT SETUP
      COM & FIELD NOTE SETUP
      MAGNETOMETER TEST
Real time transfer:      < DISABLE >
Use COM1 port as:
      < ASCII CHARACTER LOGGER >
      < CONFIGURE >

Store serial data in:   < ACQUIRE MODE >
QC warning level:      [ 9.999 ] nT
Graphic display of:    < GRADIENT >

```

System Setup Menu. The last line is shown only on gradiometers.

Select DATE AND TIME, showing the date and time menu below.

```

DATE AND TIME MENU

      Date
      Month: [ 04 ]
      Day:   [ 24 ]
      Year:  [ 03 ]

      Time
      Hour:  [ 12 ]
      Minute: [ 01 ]
      Second: [ 12 ]

      SET TO ABOVE VALUES

12:01:12   04/24/03

```

Date and Time Menu.

Enter the correct values in the numeric entry fields, then highlight SET TO THE ABOVE VALUES, and press ENTER. Hit ESC three times to return to the Main Menu.

## Warming up the G-858

After first powering up the G-858, it may take from 5 to 15 minutes for the unit to warm up and begin operating normally, depending upon the ambient temperature. Here is a recommended procedure for starting and warming up your G-858:

From the G-858 Main Menu:

```

---G858 MAGNETOMETER V3.04---
Use arrow keys to select desired
function. Confirm with "ENTER"

SEARCH MODE
SIMPLE SURVEY
MAPPED SURVEY
BASE STATION
DATA REVIEW
DATA TRANSFER
SYSTEM SETUP

12:35:45 04/24/03 Memory free: 99.9%

```

G-858 Magnetometer menu.

Highlight SYSTEM SETUP and press enter. You should see a display similar to that below:

```


---SYSTEM SETUP MENU---
AUDIO
DATE & TIME
COM PORT SETUP
COM & FIELD NOTE SETUP
MAGNETOMETER TEST
Real time transfer: < DISABLE >
Use COM1 port as:
< ASCII CHARACTER LOGGER >
< CONFIGURE >

Store serial data in: < ACQUIRE MODE >
QC warning level: [ 9.999 ] nT
Graphic display of: < GRADIENT >

```

System Setup Menu. The last line is shown only on gradiometers.

Highlight MAGNETOMETER, and press ENTER. You will now see the following display:

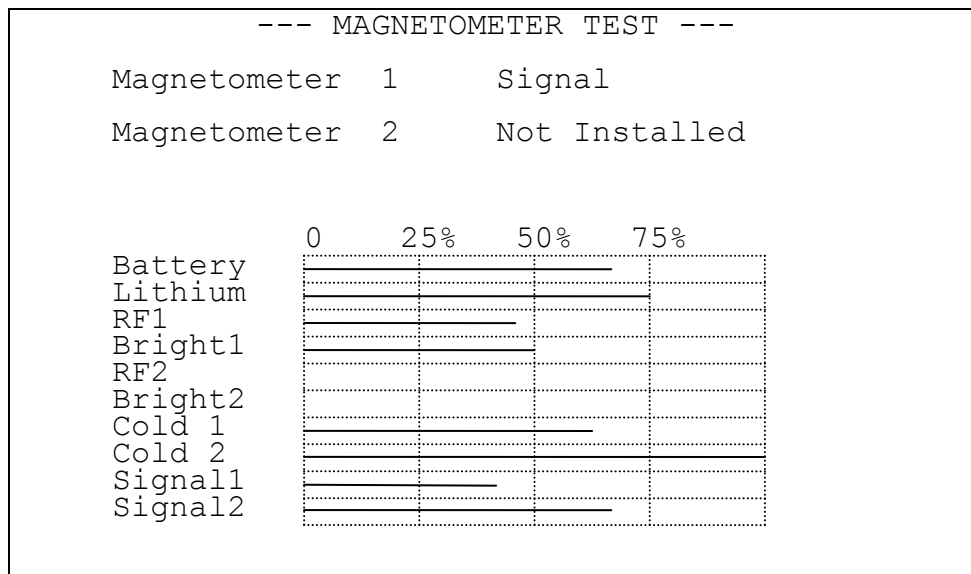

Magnetometer Test Display.

The exact display will differ depending upon how many sensors are installed, and how long the unit has warmed up. The unit is warmed up and operating properly when the Bright1 (and Bright2 if two sensors are installed) is maintaining a constant reading of 50%. Cold2 and Signal2 lines should be ignored if only one sensor is installed.

If no signal is indicated, it usually means that the sensor is oriented in the dead zone, or the field gradient is too high. Try orienting the sensor differently, and move it away from large ferrous metal objects. Typically, in an office or other indoor environment, gradients are too high, and the sensor signal will often not appear. See the section earlier in this chapter for more information on sensor dead zones.

From this menu, you should also check the level of the Lithium battery. If less than 65% (75% is normal) you should have the battery replaced. This should only be necessary every several years.

More information about this display is contained in Chapter 10.

---

**Note:** Occasionally, the unit may indicate a bad sensor during the warm-up period. If so, press the ESC key to stop the warning sounds, and then simply unplug the sensor and plug it back in. The sensor will then re-initialize, and should come up to the proper operating point.

---

You should next select SEARCH MODE from the main menu. (Press ESC 3 times to go back to the MAIN MENU). You can then observe the readings as they occur and play with different sensor orientations. The next chapter explains how to use the Search Mode.

## Gradiometer Operation

Operation in the gradiometer mode is essentially no different than operation in single mode. Simply plug in another sensor into the console. (Some units require a hardware upgrade to install the second channel of electronics. Please check with Geometrics.) Data will be automatically collected from both sensors.


---

**Note:** Sensor 1 should be positioned as the left sensor (from the operator's point of view) for a transverse gradient measurement, or as the top sensor for a vertical gradient measurement. The sensor 1 connector is the lower right connector on the side panel of the console.

---

In post-processing your data with the MagMap program, you will specify which type of gradient (horizontal or vertical) was performed.

In gradiometer operation, the sensors are positioned at the ends of a "tee", and a heavier counter weight is used. In addition, an auxiliary belt is supplied to enable some of the weight of the staff to be borne by the hips, to lighten the load on your shoulder. Having a second belt in addition to the battery belt allows more flexibility in positioning the weight of the batteries, the staff, and the console. The figure below indicates how the staff is put together.

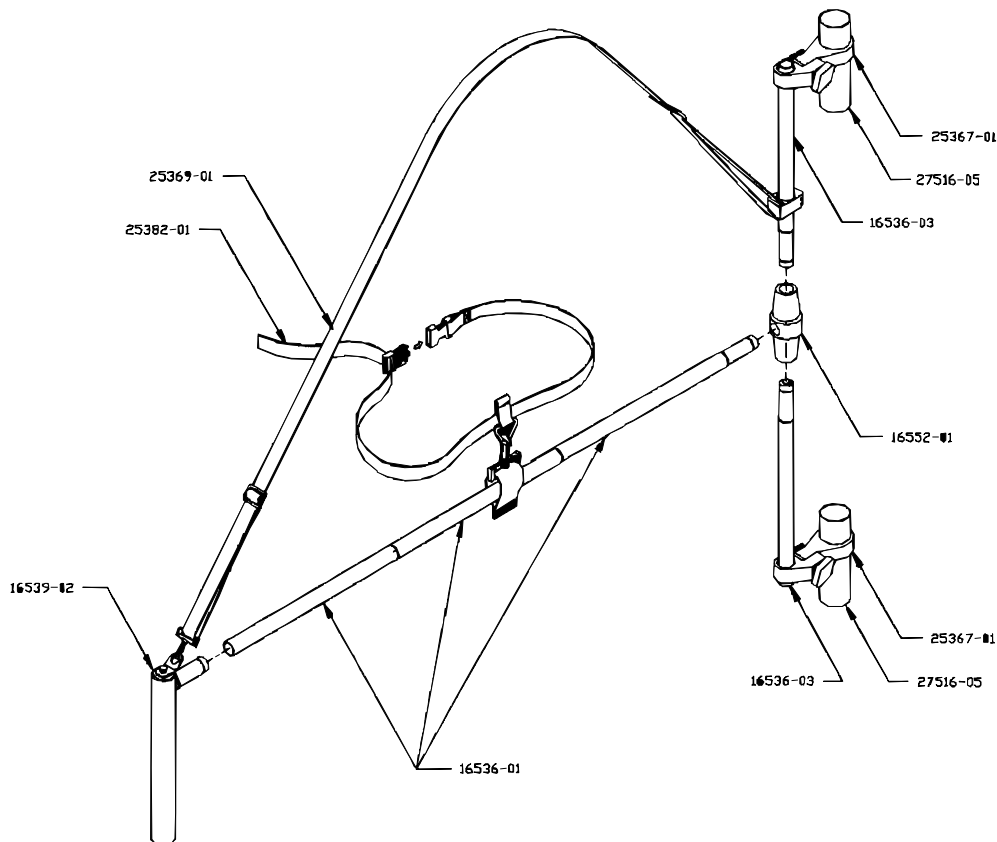

SK91026

You may choose to display either the gradient (difference between the sensors) or the value from one of the sensors on the sweep display and data review profiles. This is done from the system setup menu, which is accessed by selecting SYSTEM SETUP from the main menu.

```

      ---SYSTEM SETUP MENU---
              AUDIO
              DATE & TIME
              COM PORT SETUP
              COM & FIELD NOTE SETUP
              MAGNETOMETER TEST
Real time transfer:      < DISABLE >
Use COM1 port as:
      < ASCII CHARACTER LOGGER >
      < CONFIGURE >

Store serial data in:   < ACQUIRE MODE >
QC warning level:      [ 9.999 ] nT
Graphic display of:    < GRADIENT >

```

System Setup Menu.

Highlight the “Graphic display of” item at the bottom, and press the left or right arrow key to the desired setting. When in the FIELD setting, the display will indicate the reading from the top (or left) sensor.

---

**Note:** Neither setting will affect the storage of data. Data from both sensors is always stored and transferred to the PC. The host software will output both the difference and each sensor reading, automatically.

---

To begin to explore the various modes of operation of the G-858, press the ESC key to return to the G-858 Magnetometer menu and read the chapters that follow.

```

      ---G858 MAGNETOMETER V3.04---
Use arrow keys to select desired
function. Confirm with "ENTER"

      SEARCH MODE
      SIMPLE SURVEY
      MAPPED SURVEY
      BASE STATION
      DATA REVIEW
      DATA TRANSFER
      SYSTEM SETUP

12:35:45  04/24/03  Memory free: 99.9%

```

G-858 Magnetometer menu.

The G-858 also provides other Self Test functions that may be accessed. From the menu shown above press the ESC key to return to the main menu.

```
      ---MAIN MENU V1.12---  
  
      Use arrow key to select desired  
      function.  Confirm with "ENTER"  
  
Select Sensor Type:  
  
      MAGNETOMETER  
  
      OHMMAPPER  
  
      SELF TEST  
  
hh:mm:ss   mm/dd/yy   Memory free 99.9%
```

Main Menu

Use the arrow down key to select SELF TEST and press the ENTER key to see the DIAGNOSTIC MENU.

### Self Test

Selecting SELF TEST from the Main Menu will display the following menu:

```
      DIAGNOSTIC MENU  
  
      KEYPAD  
      SOUND  
      DISPLAY  
      REAL TIME CLOCK  
      MEMORY  
      SERIAL PORT  
      PICKLE SWITCH  
      !!! FORMAT MEMORY !!!
```

### Keypad

This will bring up a menu for testing the keypad.

### Sound

This will emit a continuous sound at maximum volume for you to test your hearing.

**Display**

Checks to see if the graphics mode of the display is working.

**Real Time Clock**

Checks the on-board real-time clock.

**Memory**

Checks the system memory. **DO NOT DISCONNECT THE BATTERY DURING THIS TEST.**

Doing this will result in loss of all data stored in the instrument.

**Serial Port**

Checks the serial port. You must attach a loop-back cable, available from computer stores, in order to perform this test.

**Pickle Switch**

Tests the optional external switch.

**Format Memory**

Erases the entire data memory of the G-858. All data in all files will be lost. If the system hangs up at some point, you may need to do this after power up to get the unit to behave properly.

This page intentionally left blank.




## Chapter 3: Search Mode

### Search Mode

In search mode, the magnetometer operates normally, displaying data and the woowee audio tones, but data is not stored in memory. This is useful for manually identifying anomaly locations, much as with a metal detector. It is also useful for checking for proper sensor operation and ambient magnetic noise.

Select SEARCH MODE from the main menu. You should see a display similar to that below:

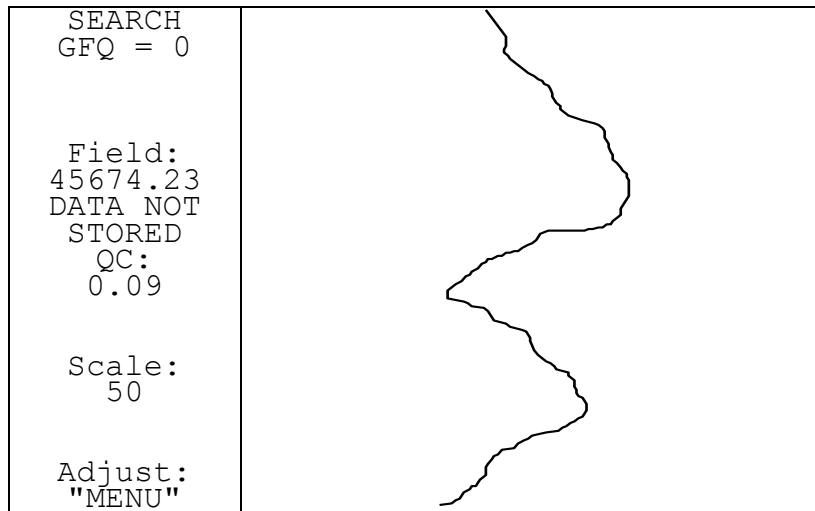

Example of Search Mode Display

---

**Note:** Data is not stored in Search Mode. This is indicated on the display, so you do not confuse it with Simple Survey.

---

### Search Mode Adjust Menu

Pressing the MENU key will bring up the Search Mode Adjust Menu. This allows you to adjust the display and audible tones:

SEARCH MODE	Master volume: < 4 >
Field: 49953.1	Woowee: Volume: < 4 >
DATA NOT STORED	Sensitivity: < 4 > Hz/nT
QC: 0.33	QC warning Volume: < 4 >
Scale: 50	Level: [ 9.999 ] nT
ADJUST: "MENU"	Full scale: < 50 > nT
	Rdngs/screen: < 25 >
	Cycle Time [ 0.1 ] s
	CENTER TRACE

Search Mode Adjust Menu.

#### Master Volume

Adjusts the over-all volume. 1 is softest, 9 loudest.

#### Woowee Volume

1 is softest, 9 loudest

#### Woowee Sensitivity

Adjusts the amount the pitch of the woowee changes with varying field readings.

#### QC warning volume

1 is softest, 9 loudest

#### QC warning level

Sets the threshold for the QC warning to be emitted. If the QC exceeds this threshold, the warning is sounded.

#### Full Scale

Sets the trace width full-scale of the display.

#### Readings per screen

Sets the vertical scale of the trace display. Higher values means the trace moves more slowly down the screen.

#### CENTER TRACE

Centers the trace in the sweep display.

**Pop up Menus**

While in Search Mode (and the other modes as well), there are two quick pop up menus that are accessible:

**Audio Key**

Pressing the AUDIO key will bring up an audio adjust indicator. Then the up- and down-arrow keys will adjust the volume, while the right- and left-arrows will adjust the pitch of the woowee. The audio adjust indicator will disappear after a few seconds.

**Scale Key**

Pressing the SCALE key will bring up a scale adjust indicator. Then the up- and down-arrow keys will adjust the speed of the sweep (readings shown per page), while the right- and left-arrows will adjust the full scale (in nT). The scale adjust indicator will disappear after a few seconds.

## Chapter 4: Simple Survey Mode


### Simple Survey

Once the unit is reading properly in Search Mode, you are ready to begin your survey. If you are unfamiliar with magnetic surveys, please read Appendix 1 and the *Applications Manual for Portable Magnetometers*, shipped with your G-858.

In simple survey mode, the unit keeps track of MARK and END LINE key presses in order to locate the position of the sensor readings. Later, after downloading the data into the PC, you will use the MagMap program to attach an x and y coordinate to each reading.

### Survey Overview

Typically, a survey is performed by walking up and down the survey area, surveying a series of lines, as shown below.

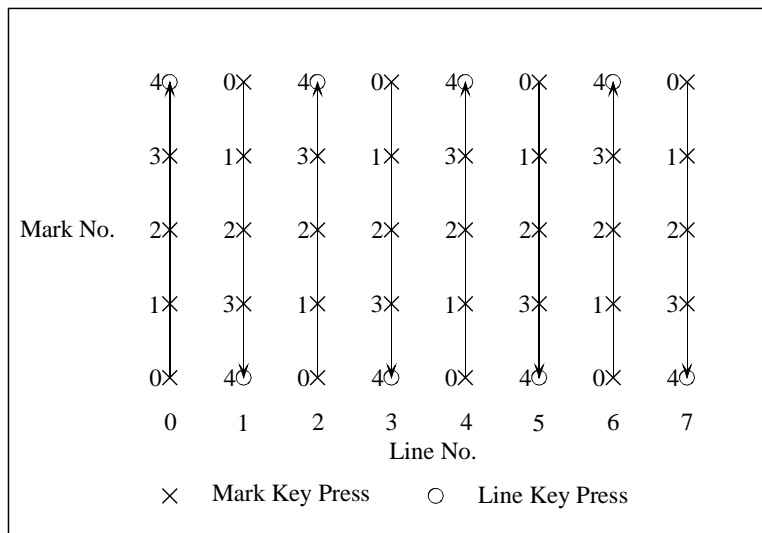

Simple Survey Overview

It is most convenient to survey lines walking in both directions, as shown, rather than walking back to the bottom of the map, always surveying up (either method maybe used, however). You will start at the lower left corner of the map, and walk up line 0, pressing the MARK key at each 'X'. At the end of line, press the END LINE key. You will then walk down line 1, and so on until the survey is finished.

---

**Note:** The line and mark numbers begin at zero. This is the most common convention, and the one adopted in the G-858. It is important to remember this, as it is sometimes easy to get confused. The survey shown above has a total of 8 lines, starting with number 0.

---

The MARK points are numbered sequentially, even in the case of a bi-directional survey, as shown in the previous figure.

---

MARK key presses are numbered starting from 0 at the beginning of the line. This is true whether you survey lines walking in both directions or not. The MagMap software will sort out the line direction on the PC.

---

If a survey is expected to last several hours or more, it is strongly recommended that you set up a second magnetometer as a base station to be used to correct for the diurnal variations in the Earth's magnetic field.

### Setting up a Simple Survey

Select simple survey from the main menu, bringing up the simple survey main menu.

```

      --- SIMPLE SURVEY MAIN MENU ---
File < 1 >      MAG      EMPTY

Survey Mode:      < CONTINUOUS >
Cycle Time:      [ 0.1      ] s
Next Line:      0
Next Mark:      0

      START NEW SURVEY

17:52:23  04/24/03  Memory Free  99.9%

```

Simple Survey Main Menu.

If someone else has already stored some surveys, the menu may not say empty. Highlight the file number, and press the left or right arrow keys until an empty file is displayed. If all 5 files are used, you will need to erase one of them. Please check with whoever has made these surveys to make sure they have downloaded the data. Files may be erased through the DATA TRANSFER section of the Main Menu. See Data Transfer, later in this chapter.

#### File

File numbers from 1 through 5 may be selected. You may start a new survey from any empty file number, and may continue any Simple Survey file.

#### Survey Mode:

Set to CONTINUOUS for continuous data acquisition at the rate given by the cycle time, set in the field below. In discrete mode, the unit will take and store a reading at each END LINE or MARK key press.

**Cycle Time**

This field has two functions. In continuous mode, it sets the rate at which readings are stored. This number also sets the measurement interval. Increasing this interval will increase the resolution, up to the maximum resolution which occurs at 1.5 seconds. Numbers higher than that will increase the spacing between readings, but will not affect the resolution.

In discrete mode, this number sets the measurement interval only. Increasing this number up to 1.5 seconds will increase the resolution. Again, beyond that, the resolution will not increase.

**Next Line****Next Mark**

Where the unit expects you to start or continue the survey.

---

**Note:** Every new survey will begin at Line=0, Mark=0. After downloading the data into the PC, you will use the MagMap program to specify the actual starting coordinates.

---

If you wish to continue a previous data set, scroll the data set number to the desired set, then select CONTINUE SURVEY. Data sets for mapped surveys or base station surveys will be shown as the data set number is scrolled. However, from this menu you may not select CONTINUE SURVEY for anything other than simple surveys.

**Acquiring Data**

Once START NEW SURVEY or CONTINUE SURVEY has been selected, the display will change to the acquisition display.

<pre> SIMPLE GFQ = 0  Field: 49876.48 !READY! QC: 0.06  Scale: 50  RS232 in:  Line: 0 Mark: 0 </pre>	
--	--

Acquisition Display.

The items shown on the acquisition display are as follows:

**GFQ =**

Displays GPS fix quality number from the \$GPGGA sentence. This value will appear ONLY if GPS is used during the survey. Standard fix without differential correction is represented by 1. Differential correction fix is represented by 2 or 9. No fix is represented by 0.

**Field:**

Displays the magnetic field reading. If the unit has the gradiometer option, and two sensors are connected, this number may represent the gradient of the field. This is set in the Setup Menu (reached through the Main Menu).

**READY**

Indicates that the instrument is ready to acquire data. Data is not currently being acquired, however.

**QC:**

Displays a quality check indication. This value grows for rapidly varying fields. If the value exceeds a threshold (set in the system setup menu or the adjust menu) a warning sound will be heard.

**Scale**

Displays the full-scale width of the sweep trace on the right hand side of the display, in nT.

**Line**

Indicates the line number at which your next END LINE or MARK key press is expected.

**Mark**

Indicates the mark number at which your next MARK or END LINE key press is expected.

---

**Note:** The line and mark number displayed is always the location of the *next* MARK or END LINE key press.


---

The unit will not be taking data yet. To start data taking, go to the starting or continuing point (indicated on the display) press the MARK key, and start walking. If you have established way points along the profile, press the MARK key at each way point. Press END LINE when you reach the end of a survey line. Press PAUSE if you want to stop recording, and PAUSE again to resume recording (the PAUSE key is effective only in continuous mode). The data display will indicate the reading with a trace display.

---

**Note:** The MARK key performs two operations. It starts the storage of data (at the beginning of a line) and logs positions into memory.

---

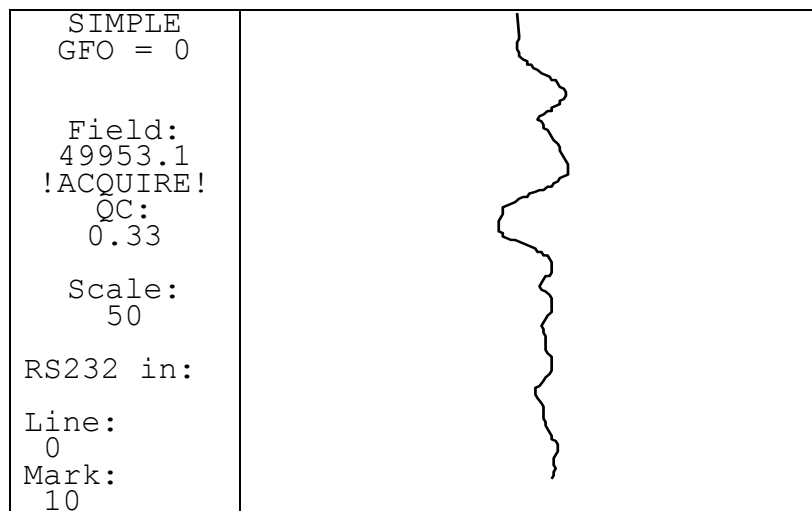

Acquisition Display with Reading Trace.

When you reach the end of each line, press the END LINE key. Upon this action, the unit will stop logging data and display a summary of the previous line:

---

```
YOU HAVE JUST REACHED THE END OF LINE.  
YOU ARE CURRENTLY AT:  
  LINE: 0  
  MARK: 10
```

```
PRESS ANY KEY TO CLEAR THIS MESSAGE  
THEN PRESS "MARK" TO START NEXT LINE
```

OR

```
PRESS "MENU" AND SELECT  
"EDIT LINE AND MARK"  
FOR EDITING
```

---

To start the next line, you must first press any key to clear this dialog box, then press MARK as you start walking up the next line. We encourage you to look at this line summary between lines, to make sure you are where the unit thinks you are, and the last line has the right number of mark key presses. If there is a problem at this point, you may edit the most recently taken data. You are not able to edit any except the most recently acquired data.

---

**Note:** Don't forget the key press necessary to clear the dialog box. The END LINE key is handy for this since it was the last key pressed. If you forget to clear the dialog box, the next MARK key press will not start data acquisition (it will only clear the dialog box).

---



## Adjust Menu

Pressing the MENU key from the Acquisition Display will bring up the adjust menu. This allows you to adjust the display and audible tones, and to enter the data editing menu.

SIMPLE SURVEY	Master volume: < 4 >
Field: 49953.1	Woowee: Volume: < 4 >
!ACQUIRE!	Sensitivity: < 4 > Hz/nT
QC: 0.33	QC warning Volume: < 4 >
Scale: 50	Level: [ 9.999 ] nT
RS232 in:	Full scale: < 50 > nT
Line: 0	Rdnngs/screen: < 25 >
Mark: 0	EDIT LINE AND MARK
	CENTER TRACE

Simple Survey Adjust Menu.

### Master Volume

Adjusts the over-all volume. 1 is softest, 9 loudest.

### Woowee Volume

1 is softest, 9 loudest

### Woowee Sensitivity

Adjusts the amount the pitch of the woowee changes with varying field readings.

### QC warning volume

1 is softest, 9 loudest

### QC warning level

Sets the threshold for the QC warning to be emitted. If the QC exceeds this threshold, the warning is sounded.

### Full Scale

Sets the trace width full-scale of the display.

### Readings per screen

Sets the vertical scale of the trace display. Higher values means the trace moves more slowly down the screen.

### EDIT LINE AND MARK

Opens the data editing menu. See detail below.

### CENTER TRACE

Centers the trace in the sweep display.

## Pop up Menus

From the acquisition display, there are two quick pop up menus that are accessible:

**Audio Key**

Pressing the audio key will bring up an audio adjust indicator. Then the up and down keys will adjust the volume, while the right and left arrows will adjust the pitch of the woowee. The audio adjust indicator will disappear after a few seconds.

**Scale Key**

Pressing the scale key will bring up a scale adjust indicator. Then the up and down keys will adjust the speed of the sweep (readings shown per page), while the right and left arrows will adjust the full scale (in nT). The scale adjust indicator will disappear after a few seconds.

**Pausing**

Pressing the PAUSE key while acquiring data will temporarily stop data acquisition. At this point, you may do any of the following:

Press PAUSE. This will re-start the acquisition process.

Press MARK. This will enter the current position. Do this only if you are currently at one of your way points. Only one MARK key press is allowed. The instrument will stay in pause mode.

Press END LINE. This will enter the END LINE position. Do this only if you are at the end of the line. The instrument will switch out of pause mode, and into the normal between-line state. Next, press the MARK key to start taking data.

## Editing Data

Selecting EDIT LINE AND MARK from the adjust menu (above) will show the edit menu.

```

SIMPLE SURVEY EDIT MENU

You are currently going to:
    Line: 4
    Mark: 1

GO BACK TO LAST POSITION:
    Line: 4
    Mark: 0

DELETE LINE:
    Line: 4

RETURN TO SURVEY

```

Simple Survey Edit Menu.

From this menu, you may delete the most recently acquired data.  
The meanings of the menu items are:

### GO BACK TO LAST POSITION

Selecting this will delete data to the last MARK or END LINE key press.

### DELETE LINE

Selecting this will delete the most recent line. If you are in the middle of a line, the current line will be deleted.

## Examples - Recovering From Common Mistakes:

### Mistakenly pressing MARK instead of END LINE at the end of a line.

This is a fairly common occurrence, and easily fixed. First, press PAUSE to halt the data acquisition. Then press ESC to close the dialog box. Press MENU, then highlight EDIT LINE AND MARK and press ENTER to bring up the Edit Menu, shown above. Highlight GO BACK TO LAST POSITION and press ENTER. Next, press ESC twice, to show the Acquisition Display. Then press END LINE. You have now corrected your mistake.

Sometimes, after pressing the MARK key at the end of a line, you might press the END LINE key instead of PAUSE, as mentioned above. In this case, from the Edit menu you should highlight GO BACK TO LAST POSITION and press ENTER *twice*. The first press takes you back to the position entered by the END LINE key press (which is one mark spacing past where you want it to be). The second press takes you back to where you actually want the end of line to be. Then, you press ESC twice, and press END LINE.

**Mistakenly pressing END LINE instead of MARK in the middle of a line.**

After pressing END LINE in the middle of a line, press ESC to clear the dialog box. Then, press MENU, highlight EDIT LINE AND MARK and press ENTER. Next, highlight GO BACK TO LAST POSITION and press ENTER. Press ESC twice to bring up the Acquisition Display.

You are now ready to continue the line where you were when you originally pressed the END LINE key. Position the sensor at the proper location, press MARK, and start walking. You are now taking data.

**Realizing the data for your current line is erroneous.**

Another common reason for editing data is if you realize a line has incorrect data, often either due to missing a MARK key press at a fiducial point, or walking off course. If this occurs, simply press the END LINE key, enter the edit menu, highlight DELETE LINE and press ENTER. Then select RETURN TO SURVEY (or press ESC), walk back to the beginning of the line, make sure the next line number displayed is correct, press the MARK key and begin the line over again.

---

**Note:** From the edit menu, you may delete as many lines or segments as you wish, all the way back to the beginning of the survey.

---

**Summary**

Data editing in simple survey is somewhat like pressing backspace on a computer. You can delete data and positions going backward from the most recent key presses. Note that this is the only way to alter the counting of marks and lines.


After making data edits, it is very important to make sure the current line and mark number are where you intend to take data. It is strongly recommended that you look at the Map display after editing data. See the next section on viewing data.

## Viewing Data

Pressing the MAP or CHART key from the Acquisition Display will bring up a representation of the data acquired. These keys may be pressed at any time. The unit will pause while you look at the display.

## Map Display

On the map display, each mark is represented by an arrow in the default direction. The distance between marks is proportional to the number of readings taken. Thus, if you are doing a bi-directional survey, and are walking at a steady pace, this display will correspond to a physical map. Otherwise, it gives an indication of the number of marks in each line and the number of readings taken between marks. The map display, after 7 lines of data have been taken, is shown below:

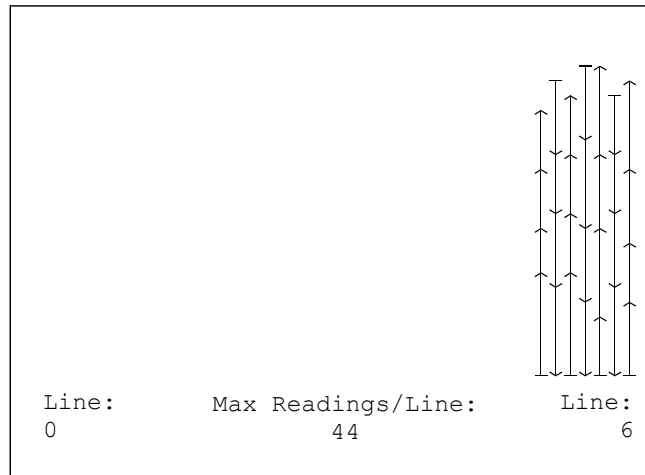

Map Display in Simple Survey Mode

Data is shifted all the way to the right, with the oldest data shown on the left. The number at the lower left indicates the number of the left-most line, while the right hand number indicates the right-most line on the display. The arrow keys may be used to scroll the display, if necessary.

Pressing ESC will exit the map display.

## Chart Display

You may review the data readings as profiles by pressing the CHART key. You may scroll both the map and charts by hitting the left and right arrow keys. If you were logging data when you pressed the MAP or CHART keys, the unit will enter the pause mode while it is displaying the map or profiles. To restart data acquisition, press ESC, then PAUSE. The chart display is shown below:

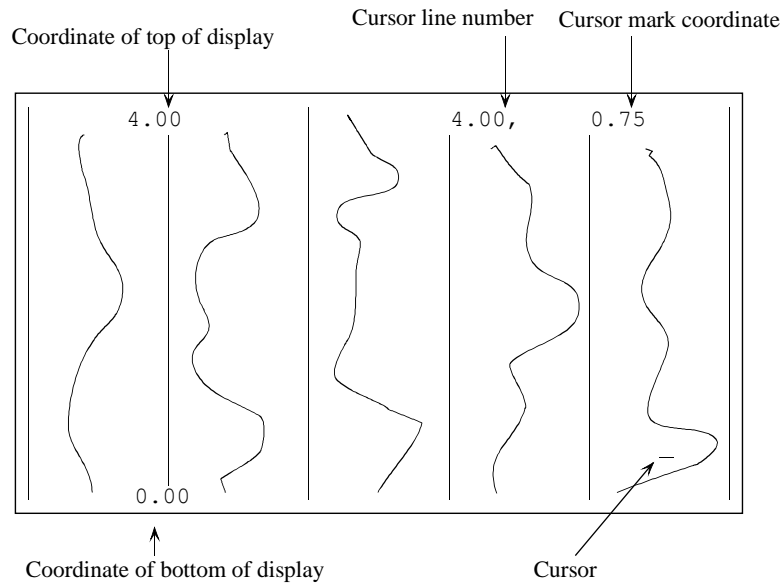


Chart Display in Simple Survey.

On the chart, coordinates are in units of marks. For example, a y-value of 3.5 indicates half way in between mark 3 and mark 4.

## Chapter 5: Mapped Survey.

### Introduction

Mapped survey allows you to better specify and visualize the survey area than simple survey, and to move around within the area in a non-continuous fashion. Using the arrow keys, you may position the cursor anywhere within the map, and acquire data. Default cursor movements are programmed into the unit, so if you follow a normal serpentine path across the survey area, you may simply press the MARK and END LINE keys as if you were doing a simple survey.

Mapped mode allows you to

- Define a rectangular survey area with pre-defined fiducial, or mark, points on a regular grid.
- Take data in a uni-directional, or bi-directional default pattern.
- Move to any arbitrary position within the survey area to take data.
- Leave gaps in the survey where positions are inaccessible.
- Observe on-screen where all data points have been logged.

### Setting up the survey

From the main menu, select MAPPED SURVEY.

```

--- Mapped Survey Main Menu ---
      Data Set Number   < 2 >
MAG  EMPTY
      Survey Mode   < CONTINUOUS >
With  [ 0.1   ] S cycle time
      DEFINE MAP

19:07:13  04/24/03  Memory Free  93.3%

```

Mapped Survey Main Menu

To start a new data set, press the right or left arrow keys until an empty data set is indicated. The Survey Mode may be set to continuous or discrete. In discrete mode, a reading will be taken only upon the operator pressing the MARK or END LINE keys. In continuous mode, readings are taken at intervals specified by the cycle time. The cycle time may be set from 0.1 to 6553.4 seconds in 0.1 second increments. Adjust the parameters shown, if necessary, then select DEFINE MAP. This brings up the set up display menu.

## Defining the Survey Area

```

      ---  SET UP DISPLAY  ---

      This menu sets up how the X and Y
      axes are displayed on the map.

      < BIDIRECTIONAL  > Survey

Lower left corner of display:
      X: [ 0.00          ]   Y: [ 0.00          ]

Upper right corner of display:
      X: [ 100.00       ]   Y: [ 100.00       ]

      Survey parallel to < Y > axis

      Line Spacing:      [ 2.00   ]

      Mark Spacing:     [ 20.00  ]

      DONE ENTERING INFO
  
```

Set Up Display Menu

The actions of the various fields are as follows:

### **Bi-directional or uni-directional survey**

This field describes whether you will take data walking both up and down lines or walking up the lines only.

### **Lower left corner**

### **Upper right corner**

Here, you must describe the coordinates of the survey area by entering the lower left and upper right extents of the displayed area. If the area is not a rectangular shape, define a bounding rectangle containing the survey site. You may use any units you like.

There are several things you must keep in mind when deciding how to define the survey, and how you will be walking to cover the area. First of all, survey lines are assumed to be shown vertically on the display. This makes it easier to visualize where you are when you are standing at the beginning of a survey line looking towards the end of the line.

Secondly, the unit assumes that you will be surveying lines from left to right across the display. In other words, when the END LINE key is pressed the cursor will move to the next line to the right on the display.

The map height must be an integral number of mark spacings. During the survey, you may manually enter positions at ends of lines which do not reach to the next fiducial mark. See the section "Manually Entering a Position," later in this chapter.

---

**Note:** Remember that you are defining the way the coordinates are viewed on the display of the G-858. See the later section "Defining a Physical Area" for more details on how to define your survey.

---



**Survey parallel to X or Y axis**

This action defines which axis you want displayed vertically on the screen. This is the axis your lines will be parallel to.

**Line spacing****Mark spacing**

These items define the distance between lines or marks.

Enter the desired parameters in the set up display menu, then select DONE ENTERING INFO, or press ESC.

---

**Note:** If the unit beeps and displays a warning dialog box, you have entered inconsistent information. Usually, this means that the chosen survey direction (x- or y-axis) is not vertical on the display screen. Either change the survey direction or the lower left and/or upper right values for the display. See *Defining a Physical Area* for more information.

---

After the G-858 accepts the values you have entered, the mapped survey main menu will reappear, with some new options:

```

      --- MAPPED SURVEY MAIN MENU ---
MAG      Data Set Number   < 2 >
      EMPTY
      Survey Mode  continuous
      With   [ 0.1   ] S cycle time
      DEFINE MAP
      BEGIN SURVEY
      AT X [0.00   ] Y [ 0.00   ]
      Going < UP >
      19:07:13  04/24/03  Memory Free  93.3%

```

Now you can manually adjust the starting point, if desired. The default starting point will be the lower left corner, and the unit will assume you will be initially walking up the display. You may adjust the starting point and direction, if desired. Then select BEGIN SURVEY.

Continuing a previous mapped survey is done in a similar way. Scroll to the desired data set number, then select CONTINUE SURVEY.

---


**Note:** You may redefine the map region for a survey that has data in it. This is done simply by selecting DEFINE MAP from the main map menu, and modifying the data. This allows an enormous amount of flexibility in taking a survey. Please see the section “Multiple Grid Surveys” below.

---


The following provides examples of how to set up the G-858 for various surveys

**MAGMAPPER MAPPED SURVEY MODE - PARALLEL TO Y AXIS**

All coordinates are defined as (x,y)

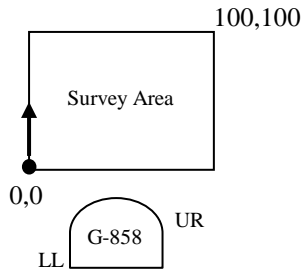


LL(0,0)	Y axis
UR(100,100)	Start UP at (0,0)

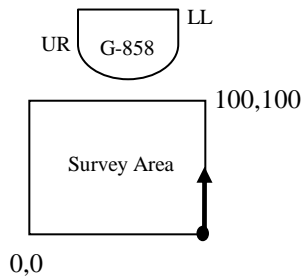


LL(100,100)	Y axis
UR(0,0)	Start DOWN at (100,0)

<b>NOTE:</b> Though you are surveying the area from right to left, the map appears left to right	
--	--

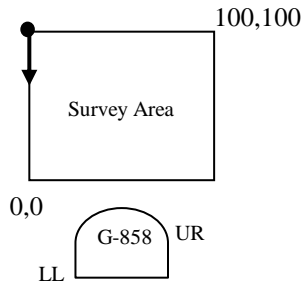

LL(0,0)	Y axis
UR(100,100)	Start DOWN at (0,100)

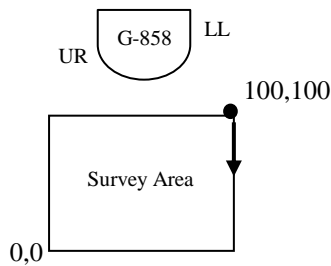

LL(100,100)	Y axis
UR(0,0)	Start UP at (100,100)

NOTES: **UR** is Upper Right, **LL** is Lower Left.

All surveys assume 100 by 100 units. Any rectangular dimension is acceptable.


Represents the start and direction for the first line.

Represents the G-858 Console orientation.


All above Mapped surveys will import into MagMap 2000 and result in correctly located data.

**MAGMAPPER MAPPED SURVEY MODE - PARALLEL TO X AXIS**

All coordinates are defined as (x,y)

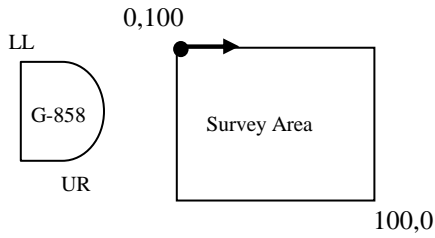


LL(0,100)	X axis
UR(100,0)	Start UP at (0,100)

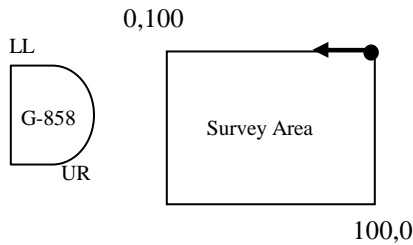


LL(0,100)	X axis
UR(100,0)	Start DOWN at (100,100)
NOT VALID FOR UNIDIRECTIONAL	

NOTE: Though you are surveying the area from right to left, the map appears left to right on the display.
---

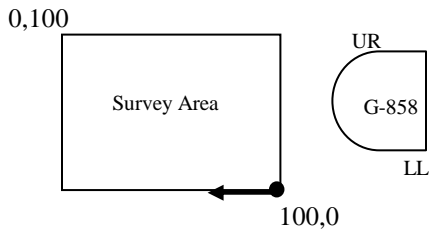

LL(100,0)	X axis
UR(0,100)	Start UP at (100,0)

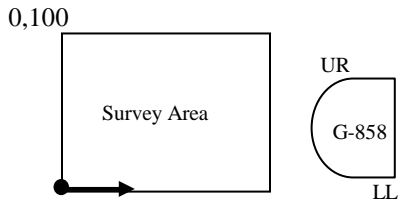


LL(100,0)	X axis
UR(0,100)	Start DOWN at (0,0)
NOT VALID FOR UNIDIRECTIONAL	

NOTES: **UR** is Upper Right, **LL** is Lower Left.

All surveys assume 100 by 100 units. Any rectangular dimension is acceptable.


●→ Represents the start and direction for the first line.

 Represents the G-858 Console orientation

All above Mapped surveys will import into MagMap 200 and result in correctly located data.

## Acquiring Data

Either beginning a new survey or continuing an old one will bring up the map acquisition display.

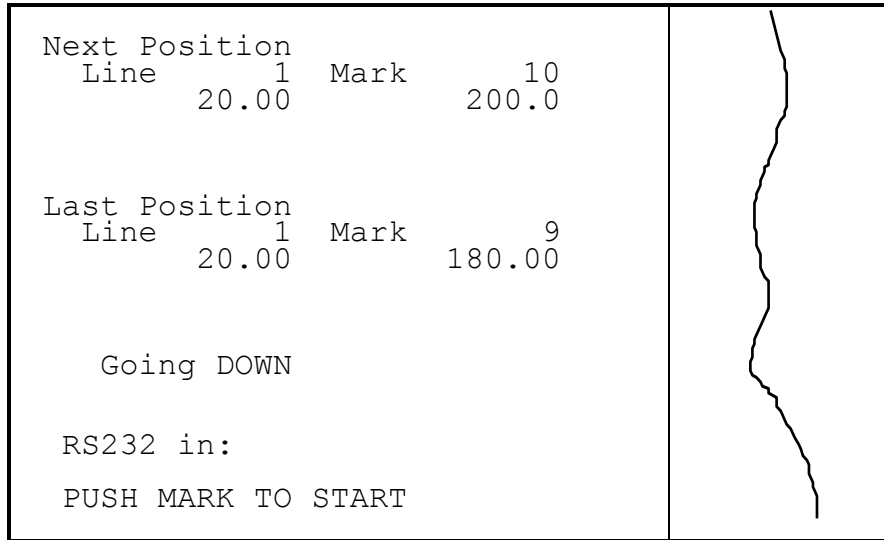

Data Display Screen

Just as in simple survey, data acquisition is started upon the operator pressing the MARK key. Acquisition will stop when the END LINE key is pressed. Position events will be stored when the MARK key is pressed during data acquisition. The PAUSE key will temporarily halt acquisition; pressing it a second time will re-start acquisition.

The top line of the display shows the position where you should next press the MARK or END LINE key. This should, of course, be the position you are walking toward. Below this line is shown the position of the last position event stored.

See the Advanced Features section later in this chapter for more information on specifying your position.

---

**Note:** From this display, you may press the MENU key to bring up the acquire menu, the MAP key to bring up the map display, or the CHART key to bring up the data review menu. These functions are described next.

---

## Acquire Menu

Pressing the MENU key will bring up the acquire menu.

```

      --- ACQUIRE MENU ---

      Next X =    24.00
      Next Y = [ 100.00 ]
      Current Direction < DOWN >

      Full scale:    < 50  > nT

      <  25  > Readings per screen

      EDIT LINE AND MARK

      Cycle Time [ 0.1  ] S
  
```

### Next X

### Next Y

You may change position along the line you are on. Depending on the direction of your survey, you will be allowed to enter a number into one of these two fields. This is very useful when your path is blocked. See the later section “Advanced Features” for more information on using this feature.

If you are between lines, you will be allowed to adjust both of these numbers. You cannot, however, enter a line position which isn’t on the regular grid. To do that, you must re-define the grid. See the section on Multi-Grid Surveys.

---

**Note:** You may also change the next position by pressing the arrow keys directly from the acquisition display after an END LINE key press.

---

### Current Direction

You may toggle between up and down.

### Full scale

The scale width of the sweep display, in nT.

### Readings per screen

The vertical scale, or sweep rate on the display.


### EDIT LINE AND MARK

Brings up the editing menu, see below.

Pressing ESC will return the unit to the acquisition display.

## Displaying the Map

The map is displayed by pressing the MAP (.) key from the data display screen:

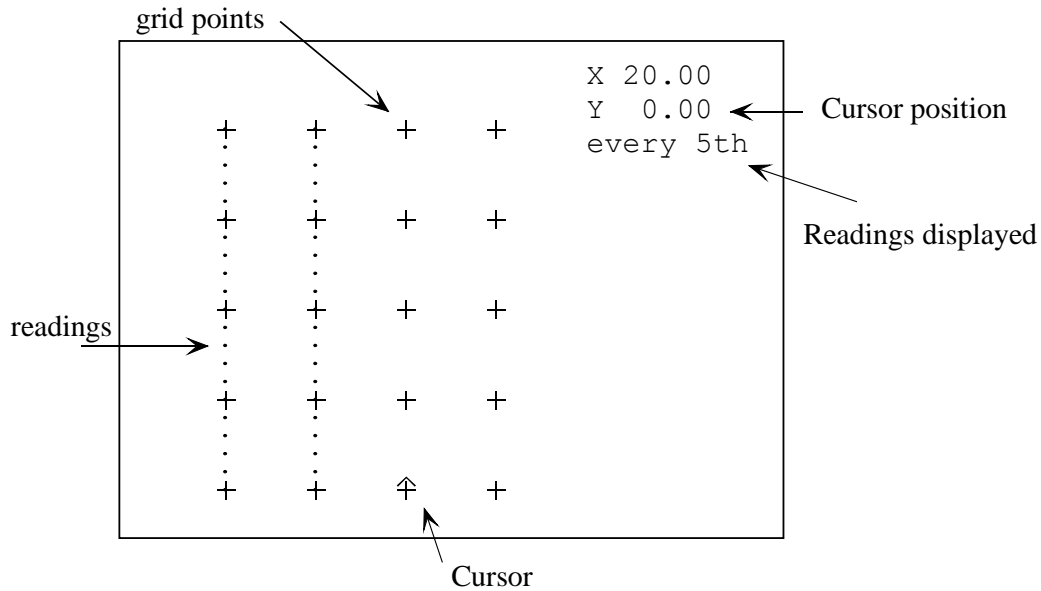

Map Display. Map is shown after two lines of data have been taken.

---

**Note:** To restart data acquisition, first press ESC to clear the map. Then press the MARK key.

---

Some care must be taken in orienting the map display with the real world. On the display, the line direction is always up and down. The survey is also assumed to start at the left side of the display. Each time the MARK or END LINE key is pressed, the position is automatically updated on the map, according to whether you have selected a unidirectional or bi-directional survey. The position indicated is where the unit thinks you should be walking toward (where you will next press the END LINE or MARK keys). You may change this to any other fiducial mark by pressing the cursor keys to manually change position.

The baseline of the survey is displayed along the bottom. This is assumed to be a straight line. The edge opposite the baseline may be a more arbitrary shape within the rectangle you specified. This is done by manually entering and changing positions when you are starting or stopping a line at a position other than the back edge of the rectangular map display.

---

**Note:** After positioning the cursor, you must make sure it is pointing in the direction you want to go. Pressing "2" will point the cursor upward, and "8" will point the cursor down.

---

## Map Menu

From the map, the MENU key brings up the Mapped Survey Map Menu:

```
--- MAPPED SURVEY MAP MENU

Move to position
[ 20.00 ] [ 100.00 ]

Show < EVERY > data point
```

Mapped Survey Map Menu

### **Move to position**

This allows you to position the cursor by entering a position.

### **Show data point**

It also allows you to reduce the number of data points plotted, to speed up the drawing process.

Pressing ESC will return the unit to the map display.

**Viewing Data**

Data profiles may be reviewed by pressing the CHART (-) key. The arrow keys will scroll through the data. Pressing the SCALE or MENU keys will allow you to adjust the scale.

Each line is plotted in its own lane. Values “wrap around” inside the lane. The scale may be set by pressing the scale key, or by pressing menu and bringing up the Chart adjust menu.

The chart display is shown below.

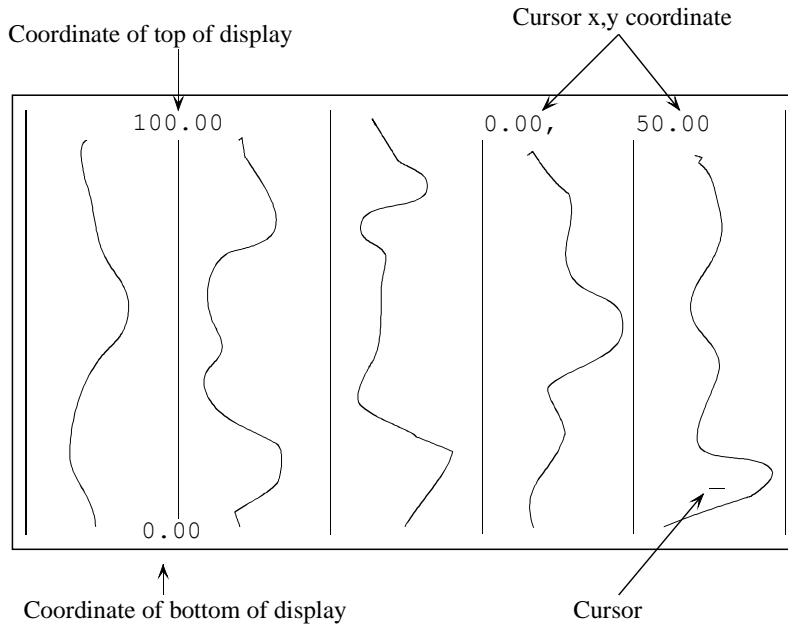


Chart Display for Mapped Survey.



Pressing the MENU key will bring up the data review menu:

```
--- DATA REVIEW MENU ---

Move to position:
  X = [ 80.00 ]
  Y = [ 100.00 ]

Full scale: < 2 > nT

Zoom to show < ALL > of line
```

**Move to position**

This will jump the cursor to a particular position, and scroll the data to that point. This is useful to rapidly page back to a particular point, without having to scroll through the entire file.

**Full scale:**

Set the full scale of each lane, in nT.

**Zoom to show portion of line**

Sets the vertical scale of the display.

## Editing Data

### Introduction

Data editing may be done in two ways. The most-recently taken data may be deleted and retaken, or you may simply retake data from anywhere within the survey. If data has been taken from overlapping locations, the MagMap software will allow you to select which set of data you want. Doing the editing on the PC, however, is an involved process. It is much easier to delete data and retake it on the spot.

Data editing in Mapped Survey is somewhat different from Simple Survey. In Mapped Survey, you have much more flexibility in positioning the cursor where you want when you are finished editing. Thus, if the default position of the cursor is not what you want, you may simply use the map and cursor movement functions to reposition it. You do not need to press the END LINE key, for example, to indicate an end of line. Simply reposition the cursor at the next line.

Also, remember to use the map make sure you deleted the data you intended to. To move from the editing menu to the map, press ESC twice, then MAP. To go back to the editing menu from the map, press ESC, MENU, and then highlight EDIT LINE AND MARK (it probably will be highlighted already) and press ENTER.

### Procedures

The data editing menu is reached from the acquire adjust menu. From the Acquisition Display, press MENU, then select EDIT LINE AND MARK.

```

      --- MAPPED SURVEY EDIT MENU ---

      Last position:
      0.00      20.0

      Prior position:
      0.00,    0.00

      DELETE DATA BETWEEN THESE POSITIONS

      DELETE LINE

      RETURN TO SURVEY
  
```

Mapped Survey Edit Menu

### **DELETE DATA BETWEEN THESE POSITIONS**

This function deletes data back to the prior mark. You will then be positioned at that previous mark.

### **DELETE LINE**

This will delete an entire line of data. It will delete the line you are currently on, or, if the current line has no data in it, it will delete the previous line.

## Examples - Recovering From Common Mistakes:

### **Mistakenly pressing MARK instead of END LINE at the end of a line.**

First, press END LINE to halt the data acquisition. Press MENU, then highlight EDIT LINE AND MARK and press ENTER to bring up the Edit menu, shown above. Highlight DELETE BETWEEN THESE TWO POSITIONS and press ENTER. Finally, press ESC twice to return to the Acquisition

Display. Then press MAP to review where data is still stored on the system, and to make sure the cursor is positioned correctly. You may need to use the arrow keys to place the cursor at the beginning of the desired line.

### **Mistakenly pressing END LINE instead of MARK in the middle of a line.**

This case actually does not require any data or positions to be deleted. In mapped mode, all that is necessary is that you properly re-position the cursor and continue taking data. After accidentally pressing the END LINE key, press MAP to bring up the Map Display. Then, use the arrow keys to position the cursor at the mark position where you pressed the END LINE key. This position will be at the exact end of the last data segment. Next, press ESC twice to move to the Acquisition Display. Now, walk back to where you pressed the END LINE key. Press MARK and start walking. Continue the line normally.

## **Summary**

Data editing in mapped mode is somewhat different than in simple survey mode. In mapped mode, you should visualize the survey area using the map, delete line segments or lines, and then reposition the cursor where you want to go next.

To move from the Edit Menu to the Map Display, press ESC twice, then MAP. To go back to the Edit Menu, press ESC, then MENU, make sure EDIT LINE AND MARK is highlighted (it should be) and press ENTER.

---

**Note:** It is strongly suggested that after each segment or line is deleted you bring up the map to see where you now are. Also, don't forget to check to see where the cursor has been positioned, and its direction, after the deletions are finished.


---

## **Defining a Physical Area**

In the explanation above, we touched only very briefly on defining the map. This section will more clearly explain how to define the map display so that it corresponds to the mental picture you have of the actual survey site.

### **Normal Orientation**


The easiest way to keep the coordinate system clear is to define the Y axis to be the direction along which you are walking, and the X axis perpendicular to that. Then the coordinates will be displayed on the G-858 in the way most people are used to seeing x and y axes, with the y axis being vertical, and the x horizontal. An example of this set up is shown below.

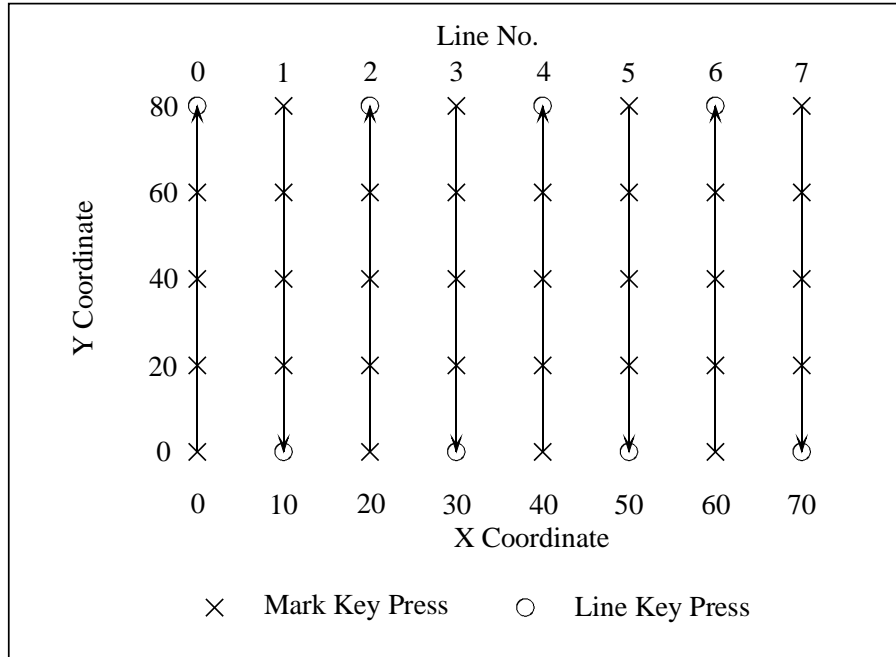

For this case, the lower left coordinate that you should enter in the Define Map Menu would be (0, 0), and the upper right would be (70, 80). The line spacing is equal to 10, and the mark spacing is equal to 20.

## 90 Degree Orientation

Suppose, however, that you have already defined the x and y coordinates, and do not wish to define the y axis as parallel to the line direction. One good reason to do this is if you are doing a smaller portion of a larger survey, and you wish the coordinates to be consistent. For example, say you want to survey a smaller area within the last survey:

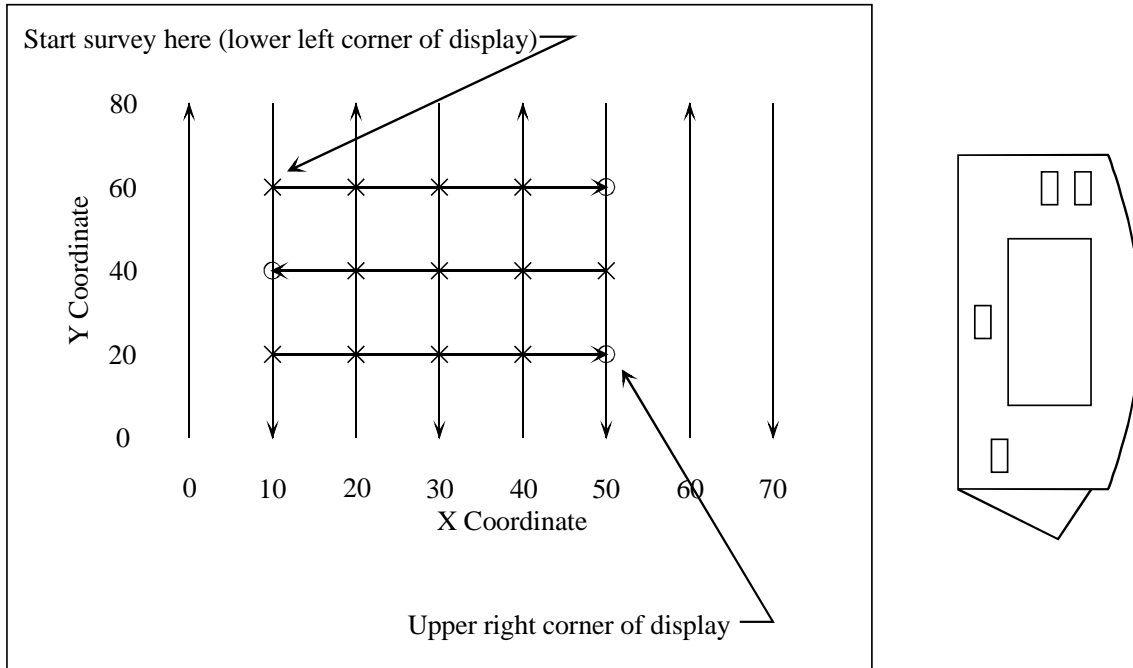

In this case, you would enter the coordinate (10, 60) as the lower left corner of the display, and (50, 20) as the upper right corner of the survey. You would also set the unit to survey parallel to the X axis. You can visualize this by rotating the G-858 clockwise 90 degrees and placing it on the map. For the sub-survey shown, the line spacing is now 20, and the mark spacing 10.

---


**Note:** Two things must be remembered in setting up the coordinate systems. First, the line direction is always up and down the G-858 display. Secondly, lines are surveyed starting from the left of the display, and moving toward the right of the display.

---

### 180 Degree Orientation

Please note that the G-858 allows you complete freedom in where to start your survey, even though the lines always must move from left to right on the display. You can always rotate the G-858 until the line direction is up and down, and the lines move from left to right. This rotation will determine what coordinate you must enter as the lower left and the upper right of the display. Some orientations will require that you start the survey in the upper left corner of the display. This can be set in the Map Setup Menu before starting the survey.

This can be seen in the following example. Suppose you are back to the original survey, shown in Figure 1, but you wish to start in the lower right corner of the site.

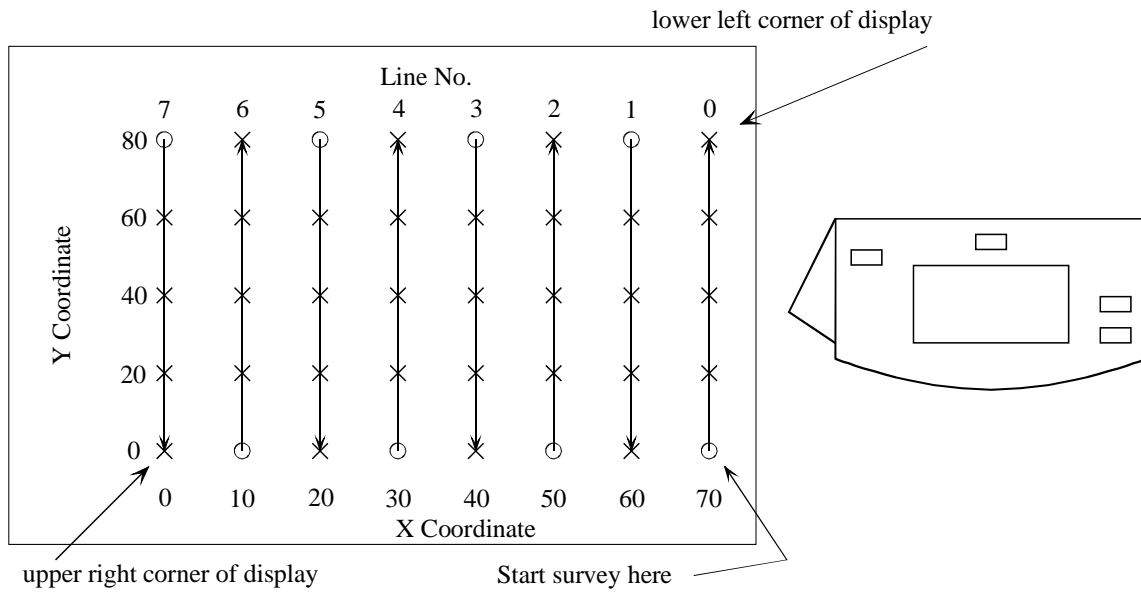

This can be accomplished by rotating the G-858 180 degrees relative to the site map. Then you can see that the correct lower left coordinate is (70, 80), while the upper right coordinate is (0,0). The survey should be begun in the upper left corner of the display.

### Advanced Features

The G-858 has many features allowing a great amount of flexibility in defining your position and viewing the survey site. This section describes the ability to define more arbitrary positions, and re-define the survey grid.

#### **Software States**

Before discussing the advanced features, it will be helpful to define some states the G-858 can be in, in order to explain when certain operations will work.

There are 3 active states of the G-858 in continuous mode:

##### **Acquire State.**

In this state, the system is storing data, generating the woowee tone, and updating the analog sweep trace of the magnetometer output. Pressing the END LINE key sends the system to the Ready State.

##### **Ready State.**

This is the state the system is in between lines, for example. Data is not being recorded, the woowee sound is off, and the sweep trace is frozen. Pressing the MARK key sends the system to the acquire state.

##### **Pause State.**

The system enters this state from the Acquire State when the pause key is pressed.

#### **Positioning Data**

In order to interpolate a position for each individual reading, the system must have a position defined both before and after each segment of readings. Because of this, you cannot press ESC from the acquire state. This would leave a series of readings without an ending position, so the most recent readings could not be properly located.

There are two position recording keys on the G-858: MARK and END LINE. As seen above, these keys, in addition to recording the current position, control the transitions between the Ready and Acquire state. They can therefore be used to start and stop data acquisition.

---

Press the MARK key at fiducial positions when you want to start or continue data storage. Press the END LINE key at a position when you want to stop data storage. You don't have to be at the actual end of a line to press the END LINE key.

---

The END LINE and MARK keys also control the automatic tracking of the position. As you have no doubt seen, the positions are automatically updated after each position key press. The MARK key increments (or decrements) the vertical position on the display. The END LINE key advances the horizontal position 1 line spacing.

---

While using the END LINE and MARK keys to control data acquisition when surveying arbitrarily positioned segments, you must manually update the correct positions.

---

**Manually Entering a Position**

You may enter new positions from either the Ready or Pause state. One way to do this is to bring up the map display (press MAP) and move the cursor with the arrow keys. This will allow you to move to any fiducial point. Another way is to bring up the acquire menu (press MENU), and type a new coordinate into the G-858. This allows you to enter positions which are not directly at a fiducial point.

---

**Note:** Neither method will allow you to enter points which are not on one of the lines of the survey. To fill in more data between lines, you must redefine the grid. See the section Multi-Grid Surveys in this chapter.

---

If you are currently in the middle of a series of readings, i.e. you pressed the PAUSE key and haven't yet entered a position, you may only position yourself on the same line you are on.

From the Ready state, you may enter any position along the current line. You can then begin a series of readings from that point.

---

**Note:** Don't forget to press the ENTER key after entering the value in the numeric entry box.


---

**Example**

The principles involved in manually entering positions may best be seen by example. Consider the survey site below, where a stream crosses the survey area. This example shows how to

1. Start a new line at an arbitrary location
2. Leave a gap in the middle of a line.
3. End a line at a specified location

Before going out in the field with your G-858 we strongly suggest that you experiment with this example and observe what happens. This will save much potential confusion out in the field.

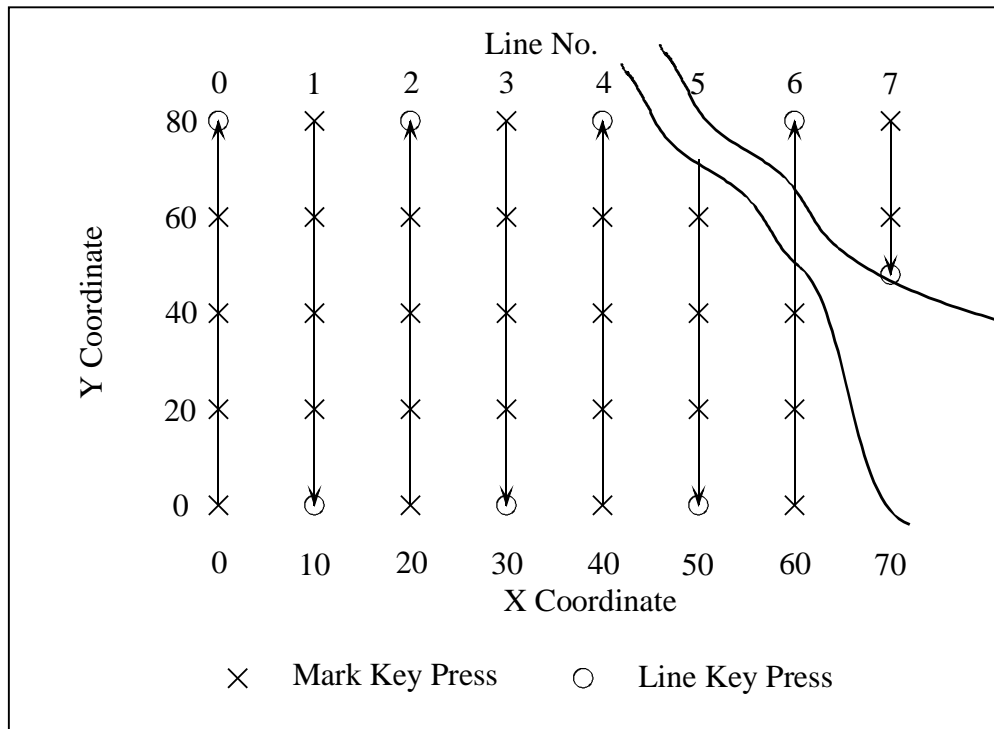

Sample Survey Containing an Obstruction.



In the above example, conduct the survey normally until you reach the end of line 4. At that point, press MENU to display the Acquire Menu. Highlight the Next Y field, and enter the value 70. (Press DEL, type 70, then press ENTER). Press ESC to return to the Acquisition Display. Position the sensor at the beginning of line 5 (Y=70), press MARK, and start walking. Proceed normally down line 5, pressing MARK at Y=60, 40, 20, and END LINE at Y=0.

Now begin line 6, by pressing MARK at Y=0, 20, and 40. Upon reaching the stream, press PAUSE. Press MENU, and enter the value 50 into the Next Y field. Press ESC. Press MARK. You have now correctly ended the previous segment of data. After fording the stream, you must enter the starting position of the next segment as described below.

---

**Note:** The position entered by an END LINE or MARK key press is the position labeled Next Position on the display. You must update this value *before* pressing the END LINE or MARK keys. If you end a segment by entering an incorrect END LINE or MARK coordinate, the data for that segment will have to be deleted and re-taken, this time with the correct final position.

---

Press MENU to bring back the Acquire Menu. Enter the position 65 into the Next Y field. Press ESC, then press MARK. You have now entered the starting position.

---

**Note:** Entering a value into the Next Y or Next X field in the Acquire Menu will not record the position. The MARK key must be pressed to do this, and MARK key presses are only recorded in the Acquisition Display.

---

To resume collecting data, press PAUSE, and start walking. Press END LINE at the end of line 6.

---

**Note:** Notice that data taking was not resumed when the MARK key was pressed. This is because you pressed the PAUSE key when you reached the stream walking up line 6. This puts the G-858 into Pause Mode, and a second PAUSE key press is used to resume data collection. Read the text at the bottom of the Acquisition Display to determine if you are in Pause Mode. If you are, it will say "Press pause to resume." If not, it will say "Press MARK to start" In this latter case, data taking will start when you press MARK. This an important point, so to avoid confusion you should always read the text at the bottom of the display.

---

Start line 7 normally, by pressing MARK at Y=80 and X=70. When you reach the stream, press PAUSE. Bring up the Acquire Menu (press MENU), and enter 45 into the Next Y field (don't forget to press ENTER). Press ESC, then press END LINE. Notice that you are no longer in the Pause Mode. The END LINE key press moves the system out of that mode.

To observe your handiwork, press the MAP key. You will see that readings are positioned correctly.

### Multi-Grid Surveys

As seen above, horizontal locations are limited to grid lines. However, you can change the grid, even in the middle of a survey. This is useful if you want to fill-in parts of a survey with finer spaced lines, or take lines in different directions.

---

**Note:** The current grid is used for the automatic tracking of positions, and to define the display extents and fiducial points of the map.

---

From the Ready state, press ESC to bring up the Mapped Survey Main Menu. Then select DEFINE MAP. Make the changes you desire, then select CONTINUE SURVEY from the Mapped Survey Main Menu. Press the MAP key to bring up the map, and position the cursor where you desire. Then bring back the acquisition display (press ESC from the map). Pressing the MARK key will begin data storage.

---

**Note:** Novices to the G-858 should not attempt this procedure. Another way to do this is to define a new file number, as if this were an unrelated survey. Data can then be located and edited separately, and combined in a program such as Surfer for Windows.

---

---

**Warning:** You may not be able to edit positions in MagMap when using a multi-grid survey. If you use this function, make sure you get the positions correct on the G-858. You must use the NOEDIT method within MagMap in order to locate surveys in which the lines are not parallel.

---


---

**Note:** The map display will only show the current grid. Thus, you may not see data points which were gathered in previous grids. In order to see all of your data points, you could re-define the grid to contain the entire area of interest.

---

**Example 1: Filling in more lines**

Suppose you have completed your survey and desire to fill in more lines over a certain portion. Consider the survey shown below.

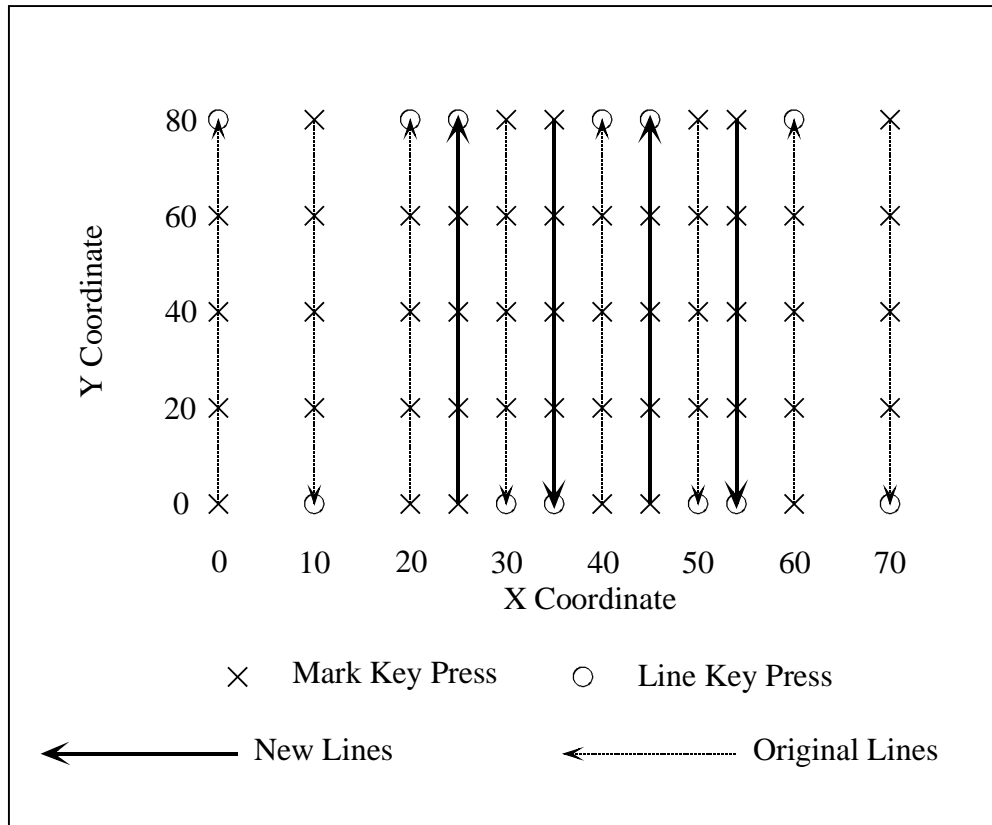

For the first part of the survey, you would have defined the grid as follows:


Lower left corner	X= 0.0, Y = 0.0
Upper right corner:	X = 70, Y = 80.0
Survey along	Y axis
Line spacing	10.0
Mark Spacing	20.0

When you have finished the original survey (the light dashed lines), ESC back to the Mapped Survey Main Menu, and select DEFINE MAP. Then enter the following values:

Lower left corner	X= 25.0, Y = 0.0
Upper right corner:	X = 55, Y = 80.0
Survey along	Y axis
Line spacing	10.0
Mark Spacing	20.0

Next, press ESC, then select CONTINUE SURVEY.

Pressing the MAP key will now show what you have done. You should see the following display:

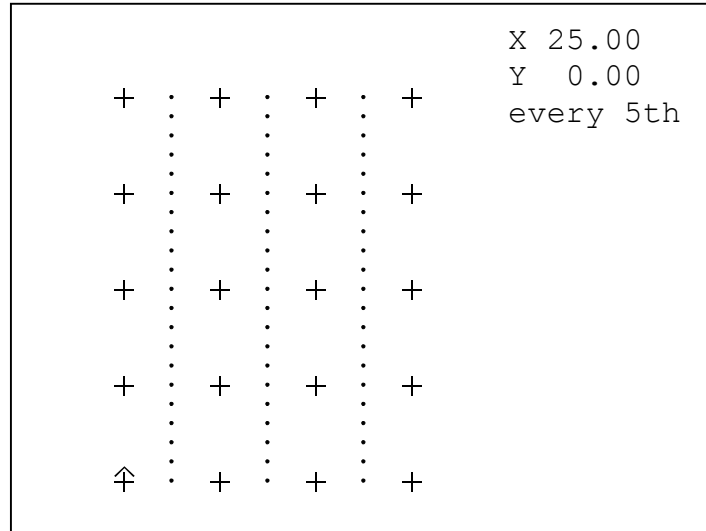

The readings taken for the previous grid are shown. The extent of the map covers only the current grid. However, all data previously taken is still stored in the G-858. You are now ready to survey the new lines in the normal fashion.

---

**Note:** The chart display will not show the old and new lines in the correct order when a multi-grid survey has been performed. The cursor coordinates displayed on the chart display will be correct, however.


---

Make sure the cursor is positioned where you want it to be. Sometimes, the cursor may not be shown, as it is positioned out of the displayed area. From the map, press MENU, then enter the desired cursor position (X=25, Y=0 in this case). Press ESC to return to the map, and the cursor will be positioned correctly.

After taking all the data of interest, you can confirm that all the data from both grids is still in the G-858. You may do this by re-entering the original grid in the map definition menu, pressing ESC, selecting CONTINUE SURVEY, and pressing MAP.

**Example 2**

You may also wish to take lines in perpendicular directions. Consider the survey shown below.

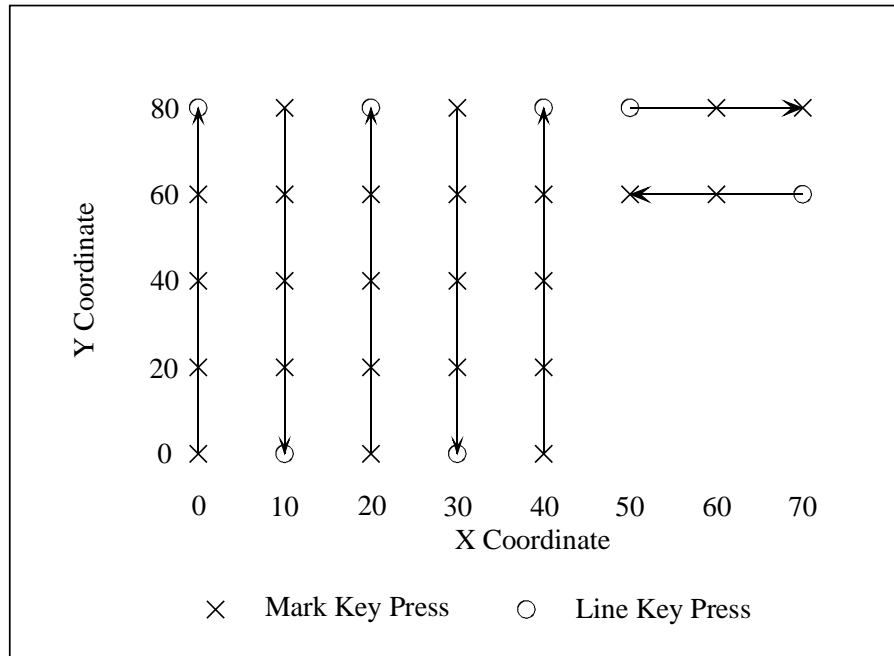

For the first part of the survey, define the grid as follows:

Lower left corner	X= 0.0, Y = 0.0
Upper right corner:	X = 40, Y = 80.0
Survey along	Y axis
Line spacing	10.0
Mark Spacing	20.0

When you have finished that, ESC back to the Mapped Survey Main Menu, and select DEFINE MAP. Then enter the following values

Lower left corner	X= 50.0, Y = 80.0
Upper right corner:	X = 70, Y = 0.0
Survey along	X axis
Line spacing	20.0
Mark Spacing	10.0

Then take the next two lines of data. When you download the data, you will be able to locate the points correctly.

---

**Note:** MagMap will not be able to edit a survey such as this. You will need to locate the data using the NOEDIT option in MagMap. See Chapter 4 for details.

---

## Chapter 6: Base Station

In base station mode, the unit will not keep track of changes in position. This is most useful when the unit is being used to collect data for diurnal correction of another, roving, unit's data. This procedure is accomplished in the post-processing of your data, using the MagMap program. See Chapter 4 for more details.

In addition, this mode supports a real-time transfer of data out of the RS232. This is useful if you are using another PC to collect and process the data. Of course, you may also store the data inside the G-858, with or without real-time transfer.

### Setting up a Base Station Survey

From the main menu, select BASE STATION. The base station main menu will appear:

```

      --- BASE STATION MAIN MENU ---
          File < 1 >  MAG  EMPTY

Read Mode:      <  TIMED  >
Store Mode:    < STORE & TRANSFER TO PC >
      Baud rate <  9600  >
Cycle Time:    [ 0.1    ] s
              START NEW SURVEY
10:40:10  02/18/95  Memory Free  86.6%

```

Base Station Main Menu

Scroll to an empty file, or select the base station file you wish to append data to. The fields are as follows:

#### Read Mode.

May be set to TIMED or TRIGGERED. In TIMED mode, data will be read at timed intervals, set by the cycle time field in this menu. In trigger mode, data will be read and stored by pressing the MARK key.

#### Store Mode

May be set to STORE IN MEMORY ONLY, STORE AND TRANSFER TO PC, or TRANSFER ONLY. Transferring data means sending it out the serial port as it is being collected. Storing means storing the data in the on-board memory.

#### Baud rate


This field is shown only if transferring to PC was selected in the above field.

#### Cycle Time

Sets the time interval between readings. Also sets the measuring interval. Increasing the measuring interval will increase the sensitivity of the magnetic reading. Setting the cycle time to greater than 1.5 seconds will change the time between readings, but will not affect the sensitivity.

### Acquiring Data

Once the parameters have been set to your satisfaction, highlight START NEW SURVEY and press Enter to begin data collection. The base station acquisition menu will be displayed, as shown below.

<pre> BASE STATION  Field: 0.00 STORE:YES TX PC: NO EVERY CYCLE QC: 0.00  Scale: 50  Adjust: "MENU"                 </pre>	
--	---

Base Station Acquisition Display

To adjust certain parameters, press the MENU key to bring up the adjust menu: This will allow you to set the volume, the scale, the woowee pitch and sound level, and center the trace.

<pre> BASE STATION  Field: 0.00 STORE:YES TX PC: NO EVERY CYCLE QC: 0.00  Scale: 50  Quit: "ESC"                 </pre>	<pre> Master volume: &lt; 4 &gt; Woowee: &lt; 4 &gt; Volume: &lt; 4 &gt; Sensitivity: &lt; 4 &gt; Hz/nT  QC warning Volume: &lt; 4 &gt; Level: [ 9.999 ] nT  Full scale: &lt; 50 &gt; nT  Rdngs/screen: &lt; 25 &gt;  Cycle time: [ 0.1 ] s  CENTER TRACE                 </pre>
---	--

Base Station Adjust Menu

The audio and scale may also be adjusted directly from the acquisition menu.

**Audio Key**

Pressing the audio key will bring up an audio adjust indicator. Then the up and down keys will adjust the volume, while the right and left arrows will adjust the pitch of the woowee. The audio adjust indicator will disappear after a few seconds.

**Scale Key**

Pressing the scale key will bring up an scale adjust indicator. Then the up and down keys will adjust the speed of the sweep (readings shown per page), while the right and left arrows will adjust the full scale (in nT). The scale adjust indicator will disappear after a few seconds.

## Chapter 7: Data Review

Enter the Data Review mode by selecting DATA REVIEW from the main menu. An example display is shown below. Your display will differ, depending upon the type of survey used for a particular file number.

--- DATA REVIEW MENU---		
File < 1 >            MAPPED SURVEY		
	Start	End
Time	01:38:45	02:40:34
Date	03/03/95	03/03/95
X	0.00	100.00
Y	0.00	100.00
File Size: 471    Readings: 115		
DO DATA REVIEW		
17:52:23    04/24/03    Memory Free    99.9%		

This menu shows the directory of each survey stored in the G-858. Scrolling the file number will scroll through the files.

Selecting DO DATA REVIEW brings up the chart display for the selected file number.



**Chart Display**

The chart display varies slightly depending upon whether the survey is a simple survey, mapped survey, or base station.

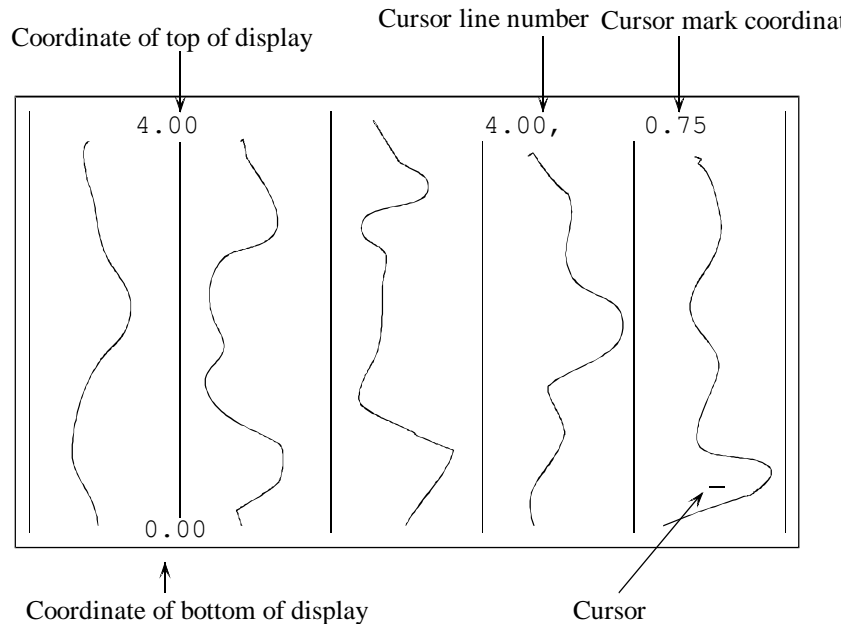


Chart Display for Simple Survey

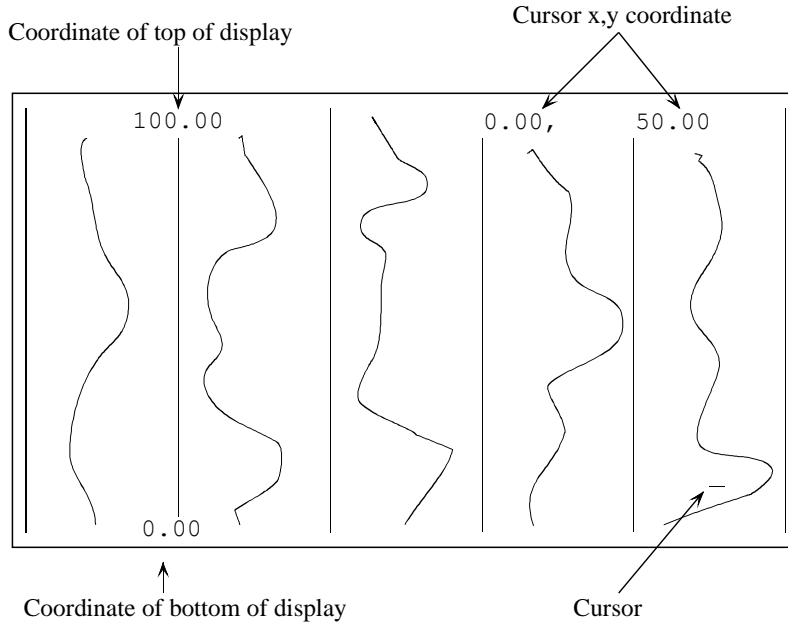


Chart Display for Mapped Survey

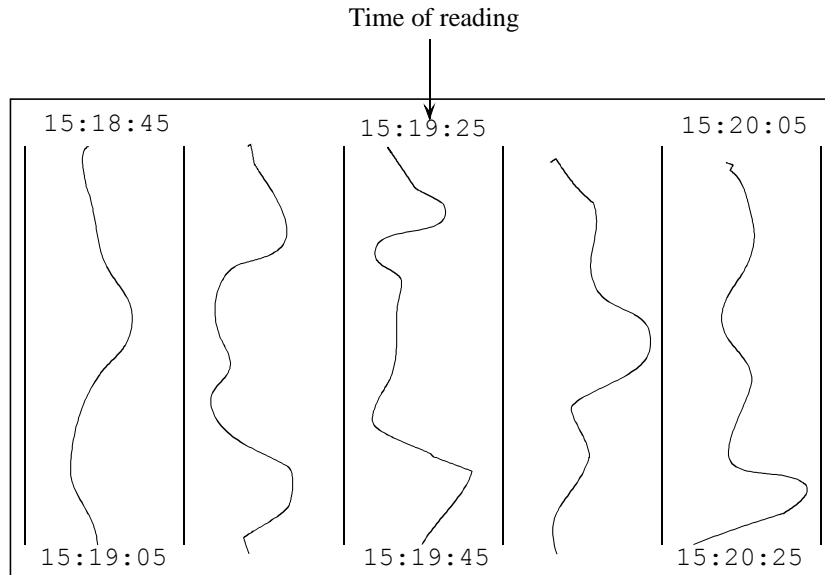


Chart Display for Base Station

The chart display shows profiles of 5 lines of data at a time. The vertical position of the display window is shown on the upper and lower left of the display. The upper right corner shows the x and y position of the cursor.

## Data Review Menu

Pressing the MENU key brings up the data review menu

```

                                DATA REVIEW MENU

Move to position
  Line:   [    6    ]
  Mark:   [    0    ]

Full Scale:  <  50  >  nT

Zoom to show <  ALL  > of line

```

Data Review Menu

The data review menu allow you to go directly to a desired position to view the data without tediously scrolling with the arrow keys. You may also change the horizontal scale, or the vertical scale.

### Move to position

You may enter the Line and Mark numbers you which to jump the cursor to in these numeric entry fields. Don't forget to press the Enter key after entering the number.

### Full Scale

This shows the horizontal full scale, in nano Teslas of each profile column. The data line will "wrap around" to stay within the window. In other words, if the data line moves off the right side of the column, it will reappear at the left side of the column if the field increases slightly.

### Zoom

This field sets the vertical scale of the display. You may show all of the line, or portions of a line by scrolling through this scroll box with the left and right arrow keys.

If the vertical scale include only a portion of the entire line, you may scroll up the display by moving the cursor with the arrow keys.

## Chapter 8: Data Transfer

Selecting DATA TRANSFER from the Main Menu will bring up the data transfer menu:

```

---DATA TRANSFER MENU ---
PC CONTROLLED TRANSFER
MANUAL ASCII TRANSFER
ERASE DATA SET
!!! FORMAT MEMORY !!!
SEND SET UP
RECEIVE SET UP

11:52:44 04/24/03 Memory Free 99.9%
```

Data Transfer Menu

This menu allows you to transfer data in either binary form or ASCII form. ASCII data is human readable, but takes about 100 times as long to download. It is suitable only for the smallest files.

Attach the serial cable (supplied with the unit) to the serial port. The other end connects to your PC. Some computers may require a 9 pin to 25 pin serial adapter, available from your computer store. You will need to know which serial port (typically COM1 or COM2) you have attached it to.

### PC Controlled Transfer

Allows transfer of data in binary format. Data will be downloaded under the control of the MagMap program on your PC. You must select this option on the G-858 console, then select download from the MagMap program. See Chapter 11, for details on running MagMap. You will also need to know which file number you want to transfer. You may select MANUAL ASCII TRANSFER to page through the files to see which one you want to transfer. Then press ESC to return to this menu, then select PC CONTROLLED TRANSFER.

### Manual ASCII Transfer

This allows data to be transferred in ASCII format. See the section below for the sub-menus under this option.

### Erase Data Set

This allows a particular data set (file) to be erased. See the section below for details.

### PC Controlled Transfer

Select this option, then run the MagMap software. There, under the Import item of the main menu, you will find options for downloading data. See chapter 11 for more details on running MagMap.

**Manual Ascii Transfer**

Selecting Manual ASCII TRANSFER will bring up the following menu

```

      ---MANUAL ASCII TRANSFER MENU

File < 1 >   MAG  MAPPED SURVEY



|      | Start    | End      |
|------|----------|----------|
| Time | 01:38:45 | 02:40:34 |
| Date | 03/03/95 | 03/03/95 |
| X    | 0.00     | 100.00   |
| Y    | 0.00     | 100.00   |



---


File Size:  471  Readings:  115

      Baud Rate <   9600   >

      START TRANSFER

11:52:44  04/24/03  Memory Free 99.9%

```

You may scroll through the file numbers to the desired data set. Then select the baud rate. Next, you must set up your communications program on your PC. When you highlight START TRANSFER and press Enter, data will be sent out the serial port.

## Erasing a Data Set

Selecting ERASE DATA SET will bring up the following menu

```

      ---ERASE DATA MENU---
File < 1 >  MAG  MAPPED SURVEY

```

	Start	End
Time	01:38:45	02:40:34
Date	03/03/95	03/03/95
X	0.00	100.00
Y	0.00	100.00

```

File Size:  471  Readings:  115

  !!! DATA SET NOT TRANSFERRED  !!!
      DELETE THIS DATA

11:52:44  04/24/03  Memory Free 99.9%

```

Scroll to the desired file number. Then select DELETE THIS DATA. You will be prompted with a dialog box before the file is actually erased. You will not be able to recover any file that you have deleted. Notice the warning message on the menu above for file numbers that have not been transferred. If you have transferred data from this file, this message will not be shown.

## Format Memory

Erases the entire data memory of the G-858. All data in all files will be lost. If the system hangs up at some point, you may need to do this after power up to get the unit to behave properly.

## Send Set Up

Intended for Geometrics Service and Test.

## Receive Set Up

Intended for Geometrics Service and Test.

## Chapter 9: GPS

### Overview

The G-858 may be used to simultaneously acquire GPS positions while it is acquiring magnetic data. In addition, the G-858 may be programmed to send commands to the GPS receiver when certain keys are pressed. All communication with the GPS takes place through the RS232 port.

The RS232 port of the G-858 is extremely versatile. That feature, and the fact that setting up RS232 communication in general is often confusing, means that you will need to carefully study this section and experiment to get your external equipment to work with the G-858.

Before connecting your GPS to the G-858, please make sure you completely understand how to operate the GPS system. GPS receivers will send data out in many formats, and you must know what commands will tell it to give you the data you wish. You may then program the G-858 to send these commands to the GPS receiver.

---

**Note:** Please remember that ASCII strings coming from a GPS unit take up a lot of memory space. Select the smallest data format you can for maximum data collection time. With a GPS unit sending a data string every 1 second in NMEA GGA format, for example, and the G-858 set to collect 10 readings per second, the memory will be full after about 3.5 hours.

---

### Collecting GPS data

First, make sure that the RS232 port is set to collect GPS data. This is done in the main System Setup menu. Set the RS232 port to DATA LOGGER. In addition, you will probably want to set the unit to store GPS data only when in the acquire mode. This means it will store GPS data only when magnetometer data is being stored. Therefore, between lines or within PAUSE mode, no GPS data will be stored. This will save memory, and typically you will not be interested in GPS data during those times.

The next step is to program the commands needed by the GPS unit into the G-858. This is done by selecting EXT RS232 & FIELD NOTE SETUP from the main System Setup menu. See the section earlier in this chapter for information on programming keystrokes to send commands to the GPS.

You will need to connect the GPS to the G-858 using the proper serial cable. Most GPS units will require a null-modem adapter between the supplied RS232 cable for the G-858 and the GPS port. Contact Geometrics for the availability of a cable specially designed for connecting directly to a GPS system.

Once the GPS system is connected, you will need to actually send it the commands you have previously programmed into the G-858. This is most easily done in the CHAT MODE of the EXT RS232 & FIELD NOTE SETUP. Select CHAT MODE, then press the desired keys to send the associated command. You will be able to observe the response of the GPS system from within chat mode. Make sure it is operating properly.

Now you are ready to log GPS data. Start your desired survey as usual. You will notice a bar indicator which when moving indicates that data is coming in on the RS232 port.

## Using GPS data

The GPS data stored during a survey is embedded within the magnetometer and other positioning data. You should upload this data into MagMap2000 where you can filter and plot GPS positions, magnetometer data, destripe (remove heading error), contour and plot the data. Visit [www.geometrics.com](http://www.geometrics.com) to download the latest version.

To manually extract the GPS positions from the file, perform the following procedure. First, download the binary file using the MagMap program. If you wish, you can also do any other MagMap function, such as locating the data or doing a diurnal correction. Remember the name of the binary file (.BIN extension) you used as the output file name when downloading the G-858 data (Import / Download). Exit the MagMap program.

From the DOS prompt run the following program:

```
BINTOASC input.bin output.gps -R0 -M0 -D0 -P0 -U0 -F0
```

where

*input* is the name of the file containing the binary downloaded data (you must type the

.BIN extension

*output* is the filename you wish for the GPS data (you must give it an extension. The GPS extension is a suggestion, however, you may use what you wish.)

-R0 . . . The options tell the program not to extract everything except the RS-232 serial strings. They are a dash, a letter, and the numeral zero.

You will now have created a file of the GPS strings, along with some G-858 formatting information. Lines will be as shown below:

```
21 DATA_STRING Date Time
```

**Example** (Line is broken only to fit on page. It is actually a single line in the file.)

```
21 $GPGGA,175748.00,3726.0363,N,12210.0318,W,0,6,001.1,00024.6,M,-
028.4,M,031,0000*6C 10:59:14.80 06/01/95
```

The 21 at the beginning of the line indicates this string came in the RS232 port of the G-858. The string is followed by a date and time stamp from the G-858. This may be used to correlate the positions with the magnetometer readings, which are also time stamped.

---

**Note:** The BINTOASC program has many other options useful for the advanced user. Type BINTOASC at the DOS prompt for a listing of the other options.

---



## Chapter 10: System Setup

Selecting SYSTEM SETUP from the main menu brings up the following menu.

```

---SYSTEM SETUP MENU---
      AUDIO
      DATE & TIME
      COM PORT SETUP
      COM & FIELD NOTE SETUP
      MAGNETOMETER TEST
Real time transfer:      < DISABLE >
Use COM1 port as:
      < ASCII CHARACTER LOGGER >
      < CONFIGURE >

Store serial data in:   < ACQUIRE MODE >
QC warning level:      [ 9.999 ] nT
Graphic display of:    < GRADIENT >

```

System Setup Menu.

### Audio

This allows you to set several parameters relating to the volumes and frequencies of the various audible tones. See below for more details.

### Date & Time

Selecting this will allow you to set the date and time. See below for more details.

### Com Port Setup

Selecting this will allow you to set the functions and baud rates of COM1 through COM4. This sets the baud rate of the serial for both incoming and outgoing data. Rates are selectable from 1200 to 115200. The system default is 9600. See below for more details.

### Com & Field Note Setup

This allows you to define ASCII text strings to be either sent out the serial port or stored as field notes. Sending strings out the serial port is useful for controlling a GPS system. Field notes are useful to mark any desired event.

Each string is associated with a particular key press. During a survey, pressing the key will cause the associated string to be either stored as a field note, or sent out the RS232 port as a command. See below for more details.

### Magnetometer Test

This selection opens a screen that provides information about the state of operation of Magnetometer 1 and Magnetometer 2, if connected. Also presented are a selection of internal voltages that indicate the state of the system. See below for more details.

## Real Time Transfer

Enabling real time transfer will cause data to be sent out the serial port during the acquisition. The data coming out will be formatted exactly as for the ASCII data transfer. The setting will not affect whether or not data is stored inside the G-858. The options here are 'DISABLE' and 'ENABLE'. When EM-61 data is being acquired this should be set to 'DISABLE'. Sending data in real time to the EM-61 causes the EM-61 to report a huge[\*] number of errors.

[\*] huge = large enough to cause trouble. The G858 gets bogged down processing these error messages.

## Serial Port (Use COM 1 as:)

There are several options for the use of COM 1 as follows:

SIMULATED KEYBOARD  
ASCII CHARACTER LOGGER  
GEOMETRICS MODULE LOGGER  
FRAMED BINARY LOGGER  
RAW BINARY LOGGER  
EM-61 WITH MAGNETOMETER  
EM-61 LOGGER

The "SIMULATED KEYBOARD" mode allows COM1 to appear as an external keyboard, in which case ASCII characters are interpreted as keypad presses. Using your favorite communication package on your PC, you can send key presses to the G-858. The built-in Microsoft Windows accessory Terminal works fine. See the section below **How to Download Commands from the PC**.

The "ASCII CHARACTER LOGGER" mode is used to log RS232 strings are stored in memory as they come in through the COM 1 port. Up to three numbers from COM1 may also be displayed while acquiring data. The display of these numbers may be configured in the "CONFIGURE" line that appears below the "ASCII CHARACTER LOGGER" entry in the scroll list. None to three numbers may be selected and each number may be independently adjusted for bias, scale and 0 to 3 decimal places to display.

The "GEOMETRICS MODULE LOGGER" mode is used to log data from all products that comply with the "GEOMETRICS MODULE" format. These include the CM201, the CM221, the G880, the G881 and the OhmMapper. Readings from these can be used in place of the G858's sensors. The display of these numbers may be configured in the "CONFIGURE" line that appears below the "GEOMETRICS MODULE LOGGER" entry in the scroll list. Up to two numbers with decimal points may be detected and logged as magnetometer field values. Zero to three numbers may be selected and each number may be independently adjusted for bias, scale and 0 to 3 decimal places to display.

The "FRAMED BINARY LOGGER" mode is currently only used with the MineLabs EM system. The readings from this are used in place of the G858's sensors.

The "RAW BINARY LOGGER" mode would only be needed if what is being received is binary data of a format other than "FRAMED BINARY". Each received byte is simply converted into two hexadecimal digits "0..F" and stored.

The "EM-61 WITH MAGNETOMETER" mode allows an EM-61 to be connected and logged as ASCII while a magnetometer sensor is also connected. The odds of an EM-61 not interfering with the magnetics measurement are very near zero, but if it can be done, the G858 is ready for it. The EM-61's battery voltage will be displayed as described below. The logging of the EM-61 may be configured in the "CONFIGURE" line that appears below the "EM-61 WITH MAGNETOMETER" entry in the scroll list.

When cycling is set to "G858 timing", the EM-61 will be commanded to cycle by the G858. The command will be sent at the rate specified by the G858's cycle time setting.

The EM61 system has a built in encoder on one of its wheels. If you wish to use this you should select the "wheel encoder" option here. The cycle time setting of the G-858 will only serve as a time out time for receiving data from the EM-61. The EM-61 will send its data based on the rotation of the wheel.

The "manual button" mode is very like the "wheel encoder" mode. In this case the manual button on the EM-61 will cause a measurement.

After processing the EM-61's data to make a reading, you have three options of what to do with the string from the EM-61.

The "THROW AWAY THE REST" option means just that. The battery voltage and the "fine time" from the serial data will be discarded.

The "STORE THE REST AS SERIAL DATA" option causes a serial string consisting of only the battery voltage to be stored along with the "fine time" information.

The "STORE ENTIRE STRING AS SERIAL" option causes everything that came from the EM-61 to be stored as serial data as well as being stored in place of magnetics readings.

The "EM-61 LOGGER" mode allows the readings from the EM-61 system to be used in place of the magnetometer readings. Whenever the G858 is placed in any of the acquire modes (Search, Simple survey, Mapped survey) the battery voltage from the EM-61 will be displayed as a three digit number in the upper left part of the screen. . The logging of the EM-61 may be configured in the "CONFIGURE" line that appears below the " EM-61 LOGGER " entry in the scroll list. See the "CONFIGURE" line explanation just above.

### **Storing Serial Data (Store serial data:)**

The storing of input ASCII text may be set to occur only when magnetic data is being recorded, "WHEN ACQUIRE" is selected (see the description of Acquire mode), or whenever the display is in the active state, "ALWAYS" selection (Acquire, Ready, or Pause modes). For a GPS system, you will typically be interested in collecting data during the Acquisition mode only.

---

**Warning:** Data will never be stored if the unit is displaying a menu, the map, or the data review profiles.

---

### **QC Warning Level:**

This sets the level above which the QC will causes a warning tone to be sounded.

**Graphic Display**

This field is shown only if the Gradiometer option has been installed, and two sensors are attached to the unit. See the section on Gradiometer for more details. The selections are "FIELD1", "FIELD 2" or "GRADIENT".

## Audio Setup

There are several audible indicators on the G-858. Selecting AUDIO will bring up the following menu.

AUDIO SETUP MENU		
Master Volume	<	4 >
Metronome Volume	<	4 >
Metronome cadence (Beeps/min)	[	60 ]
Woowee volume	<	4 >
Woowee sensitivity	<	4 >
Warning volume	<	4 >
QC warning volume	<	4 >
Mark/line key event volume	<	4 >

### Master Volume

This field adjusts the level of all the sounds. 0 is the quietest, 9 the loudest.

### Metronome Volume

This adjust the volume of the metronome. This metronome may be set to help you maintain a steady pace when surveying a site. 0 is the quietest, 9 the loudest.

### Metronome cadence

This adjust the frequency of the metronome pace.

### Woowee volume

The "woowee" is the audible indicator of field strength. It is particularly helpful when searching for anomalies in Search Mode. This sound is active only in continuous survey mode.

### Woowee sensitivity

The frequency of the woowee noise changes with changing field strength. This number represents the amount of frequency change per increment in field strength. If the field is fairly smoothly varying, set this to a higher number. For fields with large variations, set to a smaller number.

### Warning volume

This sets the volume for warning tones.

### QC warning volume

This sets the volume of the QC warning tone.

### Mark/line key event volume

This sets the volume of the key click noise when you press a position key

**Setting the Date and Time**

Selecting DATE & TIME from the System Setup Menu will bring up the following display.

```
DATE AND TIME MENU

      Date
Month:  [  2  ]
Day:    [  2  ]
Year:   [ 95  ]

      Time
Hour:   [ 13  ]
Minute: [ 30  ]
Second: [ 00  ]

      SET TO ABOVE VALUES

12:01:12   02/22/95
```

Date and Time Menu.

Enter the correct values in the numeric entry fields. Don't forget to press Enter after entering the value. Then highlight SET TO ABOVE VALUES and press Enter.

## COM Port Setup Menu

Selecting COM PORT SETUP from the System Setup Menu will display the following menu:

```
      ---COM PORT SETUP MENU---  
COM1 and COM4 PORT MODE: < 1 >  
  COM1 is RS232 I/O  
  COM4 is RS232 input  
COM2 and COM3 PORT MODE: < 1 >  
  COM2 is RS232 I/O  
  COM3 is RS232 I/O  
COM1 baud rate:      < 9600 >  
COM2 baud rate:      < 9600 >  
COM3 baud rate:      < 9600 >  
COM4 baud rate:      < 9600 >
```

### COM1 and COM4 Port Mode:

Mode 1 is COM1 is RS232 I/O and COM4 is RS232 input.

Mode 2 is COM1 is RS232 I/O and COM4 is pulsed input.

Mode 3 is COM1 is RS422 input and COM4 disabled.

### COM2 and COM3 Port Mode:

Mode 1 is COM2 is RS232 I/O and COM3 is RS232 I/O.

Mode 2 is COM2 is RS422 input and COM3 is disabled.

### COM(x) baud rate:

The selections available for baud rates are:

1200  
2400  
4800  
9600  
19200  
15200

The factory default is 9600.

## External RS232 and Field Note Setup

Selecting this item will bring up the following menu:

```

--- EXT RS232 & FIELD NOTE SETUP ---

Assign key < 0      > To < RS232 CMD  >
          DELETE COMMAND
          DOWNLOAD ALL COMMANDS FROM PC
          CHAT MODE

Press Mark to add current char to cmd
Press Del to remove last char from cmd
Press Map to add a comma to cmd
Press Numeric key to add digit to end

          Current Char < ! >

          Current Command/Field note:
-----
-----

```

### Assign Key Field

This scroll list sets which key press is associated with the ASCII string.

### Function Field

This scroll list sets up the key as either a RS232 Command or a Field Note. RS232 commands are sent out the serial port, while field notes are stored in the internal memory.

### Delete Command

Pressing ENTER on this field will delete the entire command from memory.

### Download all commands from PC

You may download an ASCII file from your PC to set up the entire set of commands. This is strongly recommended, since entering them from the scroll list below is very tedious. See the section below on how to set up and transfer a file of commands from your PC.

### Chat Mode

This will enable you to observe the ASCII text coming from whatever device is connected to the serial port.

### Current Character

You may scroll through this list to the desired character to add to the present command. Pressing the MARK key will add it to the end of the command. As a handy shortcut, you may press any numeric key to add a numeric character. There is no way to insert characters in the middle of the command. This manner of entering a command is so tedious, we recommend using it only if you forgot to download a needed command when you were near a PC.



### How to Download Commands from the PC

Use your favorite ASCII text editor (DOS Edit or Windows Notepad are easy and readily available) to create a file as shown below:

```
G858CMD,00,$PASHS,NME,SAT,A,ON
G858CMD,01,$PASHS,SPD,B,2
G858CMD,02,$PASHS,RTC,REM,B
G858CMD,03,$PASHS,RTC,BAS,A
G858CMD,04,$PASHS,RTC,TYP,9,1
G858CMD,05,$PASHS,NME,GGA,A,ON
G858TXT,06,Fell into a hole
G858TXT,07,Dropped the magnetometer
G858END
```

The first six lines set up RS232 commands. The keyword G-858CMD determines this. The second field, the two digit number, specifies which key the command or note is associated with. The numbers 00 through 09 correspond to the number keys on the console. The other keys are as shown below:

10	MARK	1 5	CHART
11	LINE	1 6	MAP
12	PAUSE	1 7	ENTER
13	ESC	1 8	POWER
14	MENU		

---


**Note:** The ASCII commands or field notes will only be active during the one of the active modes of operation. These are the Ready state, Acquire state, and Pause state, as explained on page 53.

---

Each key also retains its normal function. For example, if the MARK key is assigned to an RS232 command, pressing it will still perform the normal MARK key function. This is useful, for example, if you wanted to store a GPS reading only at each MARK location. Then, you would program the MARK key with the command to query the GPS for the current position. In doing this, you would probably also want to program the END LINE key with the same command. Then, you will get a GPS confirmation at each fiducial point.

## Magnetometer Test

The magnetometer test brings up the following display:

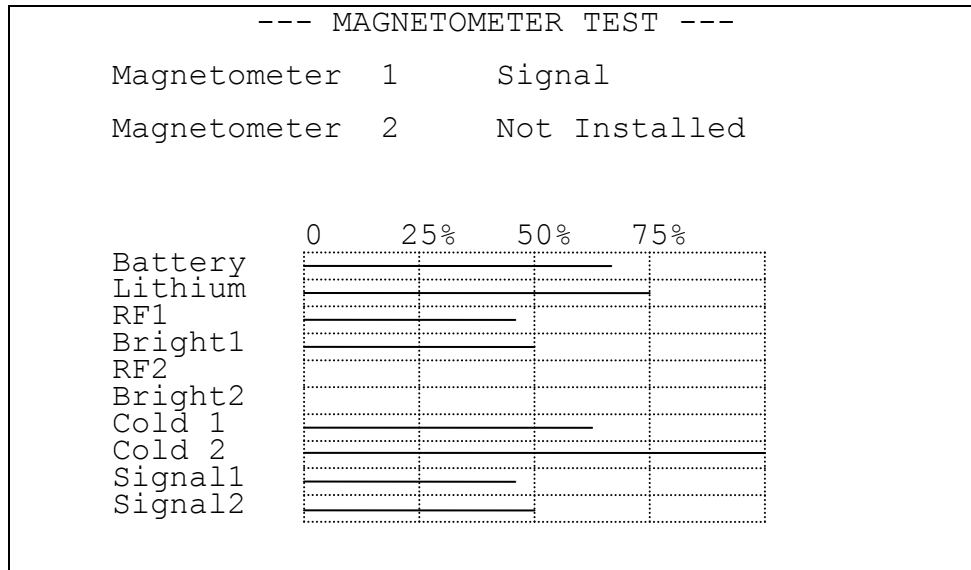

Magnetometer Test Display.

The first two lines, showing the status of the sensors, are very useful to watch if no signal is seen, and during system warm-up.. The possible states of the sensor are as follows:

**Not installed.** Indicates the sensor is unplugged.

**Initializing.** Checking for presence of sensor.

**Warming Up.** Sensor is being warmed up to the operating point. This may take several minutes in cold temperatures.

**Starting Lamp.** Energy is being applied to the sensor lamp to try to strike it. Should occur only briefly after sensor is warmed up.

**Running up.** Cesium cell is being warmed up to the desired temperature.

**Regulating.** Cell is operating, apparently normally, but a valid signal is not present. Usually occurs due to high field gradients, or the field being in a dead zone.

**Signal.** Sensor is reading a valid signal.

**Failed.** There was some problem in either striking the lamp or maintaining the desired brightness or temperature. Usually, unplugging the sensor and plugging it back in will eliminate the problem.

Next, the graph shows various internal voltages. A description of each item follows:

**Battery:** Indicates the voltage of the main battery. Full power is shown as 60%.

**Lithium.** Indicates the voltage of the internal lithium battery, which is responsible for storing data and setting when the unit is turned off. Normal operating range is 65% to 75%.

**RF 1 and RF 2** Indicates the drive level being applied to the cesium sensor lamps. Normal operating range is 25% to 75%.

**Bright 1 and Bright 2** Indicates the resulting lamp brightness. Should be maintained at 50%. During warm up, this voltage will slowly settle at that value.

**Cold 1 and Cold 2** Indicates the cesium cell temperature. Should be maintained near 50%. Larger numbers mean cooler cells.

**Signal 1 and Signal 2.** Indicates the signal strength. Signal strength is a function of cell orientation and field value. Normal strengths are between 5% and 25%.

## Chapter 11: MagMap2000 Software

The MagMap2000 software program provides the G-858 user with data downloading and editing capability. Acquired data is downloaded via high speed RS-232 communications link and then manipulated to generate or edit interpolated X-Y or GPS position information. Editing functions include shifting lines, changing the direction of lines, appending or cutting lines, and deleting or inserting segments of lines or entire lines. Vertical and horizontal (longitudinal and transverse) gradiometer data processing is supported. The program offers destriping and other filtering routines for data cleanup. The resulting data grid is graphically displayed on the PC as a quality control measure and to assure coherence between the original acquisition parameters and the final locations. In addition the program provides simple gridding, contouring and plotting (printing) of the positions, track plots and magnetic contour maps. In addition the data can be exported in formats compatible with Surfer for Windows (\*.DAT) or Geosoft OASIS (\*.XYZ).

Because of the power and complexity of the MagMap2000 program, its operation will not be covered here. Please refer to the MagMap2000 Manual for complete instructions on the use of the program. Also note that the MagMap2000 Manual, the MagMap2000 program and this manual are available on our web site [www.geometrics.com](http://www.geometrics.com) under Downloads, FTP, PUB, MAG. We recommend that you regularly visit our site for the latest software upgrades.

## **Appendix 1: Surveying Principles**

This section outlines the principles of performing a magnetic survey. It covers setting up and performing the survey and locating items of interest within anomalies.

### **Guidelines for Small Ground Magnetometer Surveys**

The general comments below cover only the site layout and preparations for a survey. The survey objectives, determination of parameters for the instrument data collection and the actual data processing and map preparation are covered elsewhere.

In order to accomplish a successful ground survey, each of the elements of magnetometer data acquisition, path over the ground from which the data are recorded, and processing of the data into map form, must be handled in a precise and accurate manner. Each element is completely interdependent upon the others and if one is compromised in quality or accuracy then all are compromised. During a survey, possibilities for error are numerous and great care and concentration are required to avoid mistakes, some of which may be so serious as to require starting the survey over. The focus should be toward completing the survey completely error-free.

Typically, the most difficult surveys are those involving detection of small magnetic targets and the presentation of an accurate 1 or 2 nT contour map. In these cases, the survey must include: a close line spacing (1-2 m) with precise tracking in both the X- and Y- directions; diurnal correction (0.5 nT or better); correction of heading errors from instrument and/or operator; maintaining the sensor a constant distance above the ground; and absolutely no mistakes in procedure and data processing.

### **Number of People**

Under certain conditions, the survey can be laid out and run by one individual; but this is rare and risky. It is far better to have a minimum of two people closely involved and ideally, three or even four people. Not only must the layout and marking of the survey lines be considered but also an individual must be designated to maintain a separate survey log, set up the base station, and operate the portable magnetometer. Note also that the operator doing all of the walking may require relief, for oftentimes the terrain and distance conspire to make his job very grueling.

### **Survey Efficiency**

Speed and cost-efficiency in completing the survey is of course the ideal objective. This does not, however, require the use of innovative short cuts, new gadgetry or excessive manpower, but rather the avoidance of mistakes and errors. To prevent wandering off line even once in the course of a survey, with all of the attendant time spent sorting out and making the corrections, easily justifies a slower but more positive method. Efficiency will only be achieved by avoiding confusion, the correction of errors, and by the use of fail-safe procedures. All of the methods suggested below are simple low tech, and relatively slow, but proven effective. They can easily be improved upon but only at the risk of greater time, survey quality, or greater cost. So in the beginning, keep it as simple as possible.

## Layout of the Survey Track

Having determined the optimum line spacing, layout the survey area in a square or rectangular format with the lines running N to S if possible. Use a Theodolite if available, otherwise use a measurement tape (non-stretch) of the required length. Designate one side of the area to be the "baseline" and layout and mark on this line each survey profile. Note that any stakes driven into the ground must be non-magnetic. (Wooden stakes driven into the ground will work well but may not be visible at distance.) If the site will be reoccupied in the future, it may be desirable to drive a one-meter iron rod (re-bar) into the ground at each corner of the survey area as a permanent marker. Since the profile line markers may not be visible at a distance, a method must be found that will allow the Magnetometer operator to locate and follow the line: a light cord or rope stretched on the ground between the beginning and end of each line; a long PVC pipe or other colored marker to be held at the end of each line and then sequentially moved; use of spray paint to mark a series of dashes along the path of each line, etc.

If the terrain is rough or bushy, ground markers along each line will be essential. Otherwise, if the terrain is flat and each end of the line is readily visible, a marker at each end and in the center may suffice. (The operator should have at least two markers to line up on when starting a line.) Whatever method is chosen, it must be completely non-magnetic, positive, easily moved in a coordinated way, and must give the operator a precise direction.

Note that coordination between the people moving the markers is sometimes difficult and frequently a source of error. In addition, if the survey lines are closely spaced, e.g., one- or two-meter separation, the Magnetometer operator may have trouble distinguishing between which marker to head for. The most certain and positive method in all cases is to mark the path by stretching a light string or rope the entire length of the pathway; or, to paint or otherwise mark the ground at short intervals.

If the area to be surveyed is larger than say 100 x 100 meters or difficult to walk through, then the area should be broken up into convenient sub-sections which overlap by at least one profile line. If some sections of line are not passable, then provision should be made for the operator to detour around them but only after establishing a procedure to stop/start (pause) and annotate the data. (This must be foolproof, simple and fully coordinated with the data processing.) Note that the Magnetometer operator must be aware of what line he is on at all times and the line number must agree with the line number recorded in the data. This is once again a frequent source of error and should be double-checked by another person.

In no case should a survey be started until all lines have been laid out and marked, and all aspects of the survey carefully re-checked. A few hours more or less at this stage means very little. What is crucial is to prevent major errors (or even minor ones) that may cost extra days of time and effort.

## Diurnal Correction

There are many types of surveys that do not require correction for time varying field errors (diurnal). Generally they involve large magnetic targets such as pipelines and tanks, or coarse line spacing, or where the survey may be accomplished in a very short period of time. In these cases, once it is determined that a severe magnetic storm is not in progress, the survey can proceed without the normal base station correction and with good reliable results.

Note that the high measurement rate of the G-858 allows a rapid walking speed along the profile line. Thus, even large target anomalies are covered within tens of seconds, reducing the potential Diurnal effects.

Surveys that involve very close line spacing, small or subtle targets or where the maximum accuracy is desired require diurnal correction from a base station installed close to the survey area. Ideally, equal sensitivity and measurement rates to the field instrument should be employed in the base station. In general practice, whatever instrument is available is used. In most cases this works well even during periods of relative high field activity.

It should be remembered that "diurnal error" will have the same effects in the mapping process as "location error", and that without correction, low amplitude/high frequency anomalies could appear in the measured data that would seem to be targets but would in fact not be real. In addition, if the survey has been broken up into blocks that are acquired on different days, the blocks will not fit smoothly together unless a diurnal correction is made and their D C level shifted.

There are also other types of local magnetic field disturbances that can seriously affect the map accuracy and quality. These include ground currents and other local AC or DC fields from power lines or urban electric trains or trolleys. Of these, electric trains or trolleys are the more serious as their effects may be large in amplitude and extend for many miles. Usually it is more effective to complete the survey at night when these noise fields are greatly diminished.

### **Survey Accuracy**

Commercial survey specifications may allow an “off line” error of up to  $\pm 20\%$  (or more) of the line separation. For a magnetic object having an anomaly extending over several lines, this amount of location error does not prevent the object’s detection but does distort the anomaly’s shape, its peak-to-peak amplitude and its true location. Large changes in speed along the profile line will have a similar effect but can be prevented by the use of intermediate waypoints. (The worst case condition would be “off line” by  $+20\%$  in one direction and “off line” by  $-20\%$  in the opposite direction with each line having a  $10\%$  change in speed.) Location errors of this magnitude will not seriously change the overall correctness of the final map, considering that this type of survey is primarily for detection/location. This is not the case, however, if the location errors substantially exceed  $\pm 20\%$ , e.g., off by one or more line separations. This amount of error may cause targets of interest to go undetected, or target anomalies to be shifted in location, resulting in, at worst, an erroneous map or at best an untrustworthy one. Careful layout and accurate tracking along the line will avoid these problems.

### **Survey Credibility**

How does a client or survey manager know that a survey has been conducted properly and that the results are correct and believable? He examines the finished contour map for gross errors in data fit, location of target signatures, and overall map quality.

- 1) Selected anomalies that have been detected are re-acquired to see if they are in the proper location.
- 2) The raw data are examined to insure that line numbers are correct, data corrections have been properly executed, etc.
- 3) Selected tests are made on the finished data, e.g., a plot of “stacked profiles” to determine that start/stop points are correct, speed changes are not excessive, there are no data gaps, etc.

## Location of Small Objects Within Associated Anomalies

When data has been acquired over an area and processed into map form, it is often necessary to reacquire the location of each anomaly and dig to expose the ferrous object. The relocation of the anomaly is relatively simple since the coordinates can be taken directly from the map produced. However, the exact location of the object within the anomaly is often times difficult to identify and the convoluted magnetic field can be very confusing.

The anomaly may be sharp and steep (high frequency) indicating a small object close to the surface. It may be just one peak or it may be multiple peaks depending upon the object's shape, its orientation within the earth's field, and whether the anomaly is largely due to permanent or induced effect. It may appear as a dipole or monopole, and its shape on the map may be further distorted by the distance between profiles, especially if this is large with respect to the object size. Each of these factors will also affect the anomaly signature when the object is much larger in ferrous mass and/or is buried much deeper with the resultant areal coverage of the anomaly much larger (low frequency).

As one sweeps the G-858 sensor over these peaks, it is difficult to conceptually grasp their significance, especially when using the audio output as a reference. To reduce confusion and to provide the basis for a systematic approach, it is very helpful to produce a 3-D map showing each of the peaks and valleys with the perspective of depth. Generally, a high and low pair (monopole) will stand out from the rest of the peaks and if these peaks are relocated using the G-858, the object will be midway between them.

When undertaking this exercise in the field, the audio tone should be turned down or even disregarded with the visual display of the earth's field on the front panel becoming the primary focus. By slowly moving the sensor over the anomalous area, the exact high and low peak can be located and a spot on the ground marked for each. A dipole, in the earth's field inclinations of greater than  $60^\circ$  will have its low North of the high peak, and in horizontal fields (inclination of  $0^\circ$ ), the low will be in the center with a high at the North and the South ends. The point midway between high and low will contain the highest gradient and will be directly over the object or very close to it. In those cases where there is only one strong peak, the object will be directly beneath the peak.

For very large anomalies the distance between high and low peaks may be two to ten meters or even greater. To reduce the amount of digging, it is suggested that a short profile be run completely over the anomaly, passing directly over each peak previously located and marked on the ground. Viewing this profile on the G-858 display will allow the estimation of the point of inflection of the curve between the peaks indicating the point of maximum Gradient (which should be directly over the object), and the depth of burial by means of the half width rule. (Refer to chapter V of Applications Manual for Portable Magnetometers.)

## Appendix 2: CSAZ

### Cesium Sensor Azimuth Program

CSAZ is a program written by Geometrics for users of Cesium magnetometers. The purpose of the program is to determine the proper orientation of the Cesium sensor at various earth's field dip angles. AZ stands for azimuth.

The program is located on the MagMap install disk included with the G-858. Once MagMap is installed, CSAZ will also be installed.

The program is easy to operate. Begin by typing CSAZ. You will see a towed bird with the sensor mounted vertically. A lower graphic image displays the bird from a vertical perspective. If you are using the program for land or marine applications, the orientation of the bird can be taken to be the orientation of the sensor staff or fish.

The first piece of information required is the earth's dip angle in your survey area. Refer to Geometrics' Application Manual for Portable Magnetometers, page 5, and select the angle from the map. For instance, the dip angle in San Francisco is 62 degree, Chicago is 72 degrees, Sao Paulo is 30 degrees and Singapore is 18 degrees. Next enter a N or S for the hemisphere (no enter key required here).

First we recommend that you just press enter twice for no tilt and no rotation, as shown in Figure 1. After a few moments you will hear a beep when the computations are completed. Press any key to see the graphical display of the signal to noise ratio of the sensor in that orientation at that dip angle. This is shown in Figure 2.

The circumference of the graphic represents the compass directions in degrees, i.e. the survey direction. The white portion of the graphic emanating from the center is the proportional signal-to-noise ratio. The center  $\pm 15$  degree cone is the dead zone, so the informational part of the display is represented by that part of the "white" area that is outside of the 15 degree circle. The longer the white line, the better the response of the magnetometer in that direction.

If the white line terminates inside the 15 degree circle, then you will get no signal traveling in that direction. If it terminates just outside the 15 degree circle, then the installation will tolerate very little in the way of yaw, pitch or roll (depending on orientation, but most likely yaw) of the sensor before the earth's field vector goes into the sensor dead zone. Longer lines are better.

Next, press escape and re-enter the dip angle and hemisphere information. Now you can tilt and rotate the sensor to see the effect on the signal versus survey direction. We have found that tilt angles of 0, 45 and 90 cover all realistic installations and dip angles. Rotating the sensor often has the effect of changing the optimum direction of survey.

Try dip angle of 0 degrees with a tilt of 90 degrees (Figures 3 and 4). Try rotating 45 degrees (Figures 5 and 6). Even in a horizontal field, one can survey in both north-south and east-west directions. Geometrics sensors are fully automatic hemispheric switching allowing this versatility.

Try dip angle of 70 degrees (Indiana) with a tilt of 45 degrees and a rotation of 90 degrees (Figures 7 and 8). In some areas, maximum signal cannot be achieved in all survey directions, but any signal-to-noise lines extending out to 20 and beyond will produce excellent data in those survey directions even in turbulent air.



If you press F1 the program will identify your first available printer port and print out a laser printer compatible graphic of the screen. F2 is for Epson compatible printers. If you have both LPT1 and LPT2 operational and you want to go to LPT2, then add the following to the command line:

```
c:\csaz.exe /L=2
```

or /L=3 for LPT3.

We welcome comments or questions. Please contact

Geometrics, Inc.  
408-734-4616 tel  
408-745-6131 fax  
sales@geometrics.com email

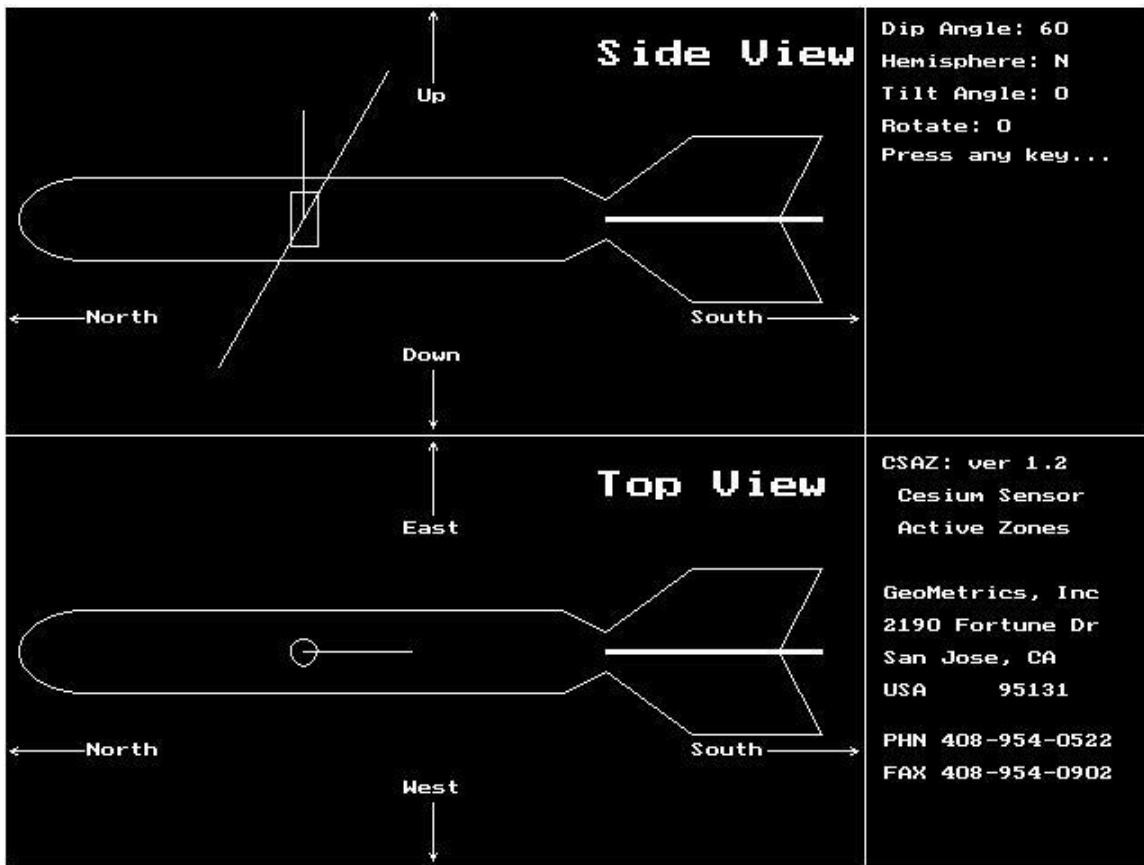


Figure 1.



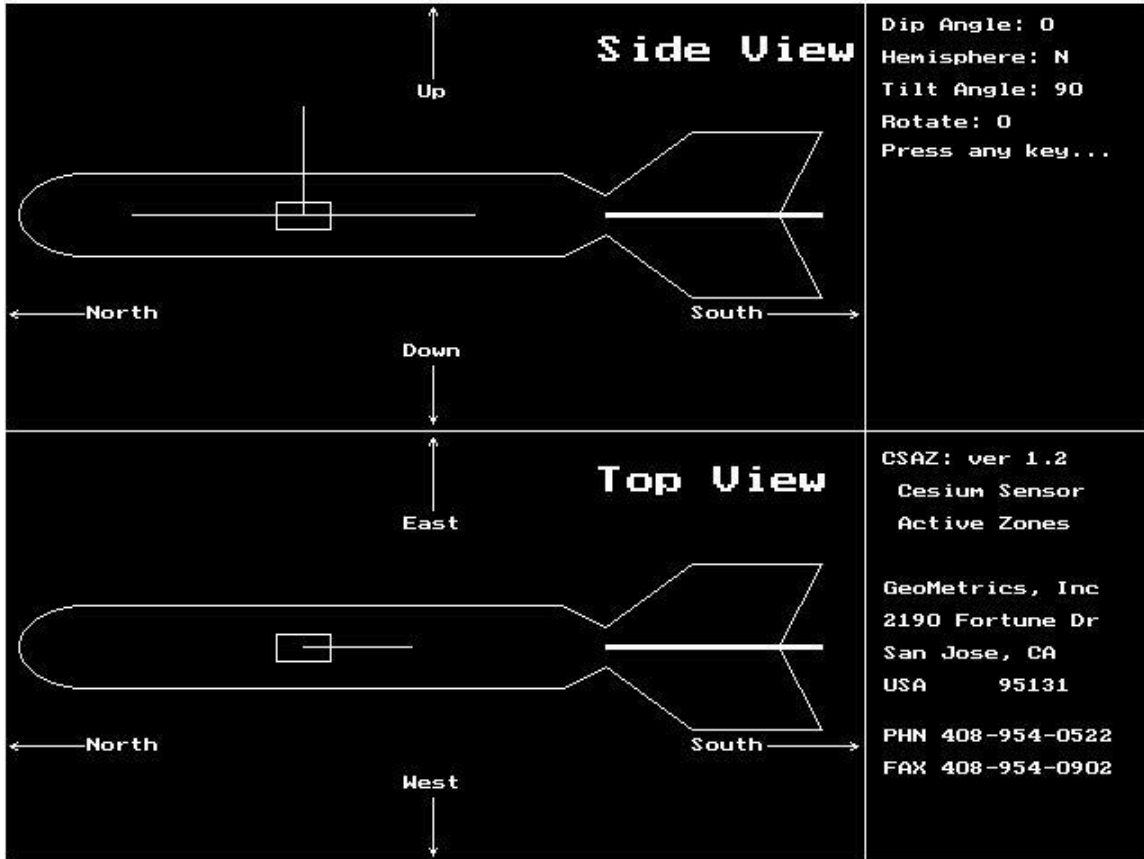


Figure 3.

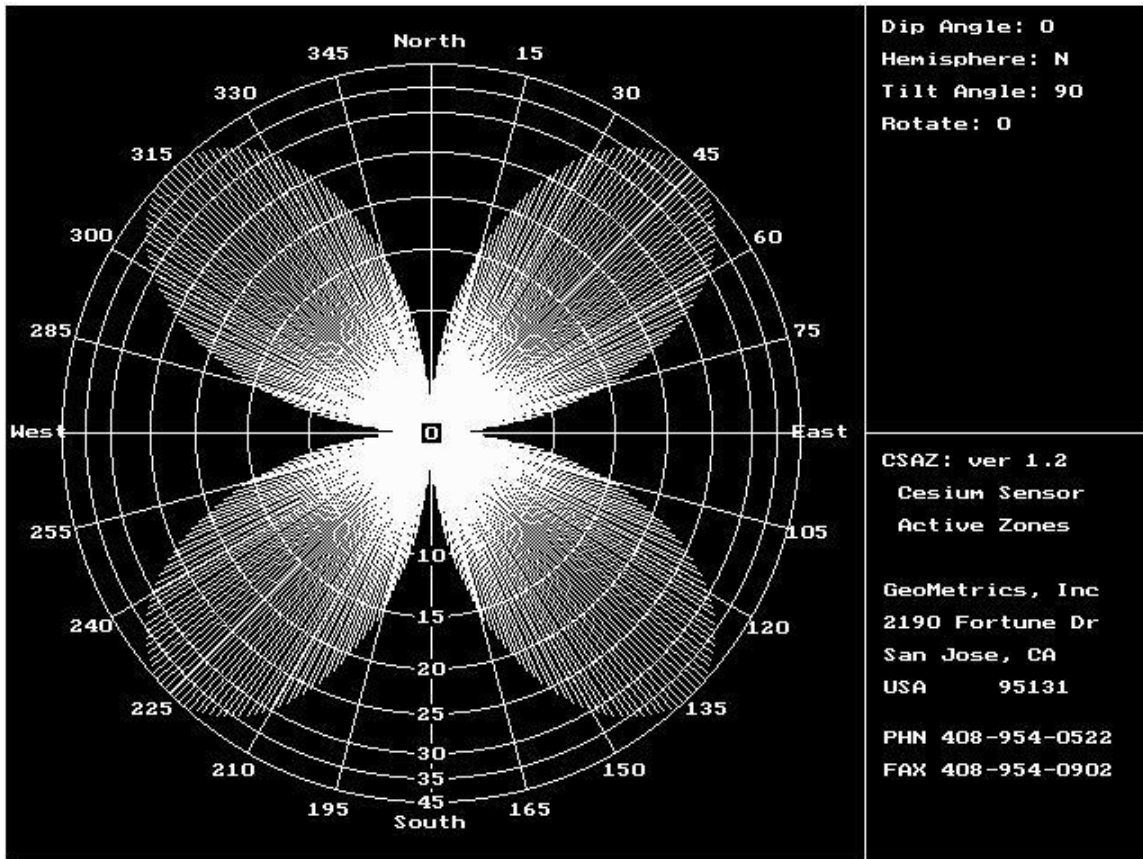


Figure 4.

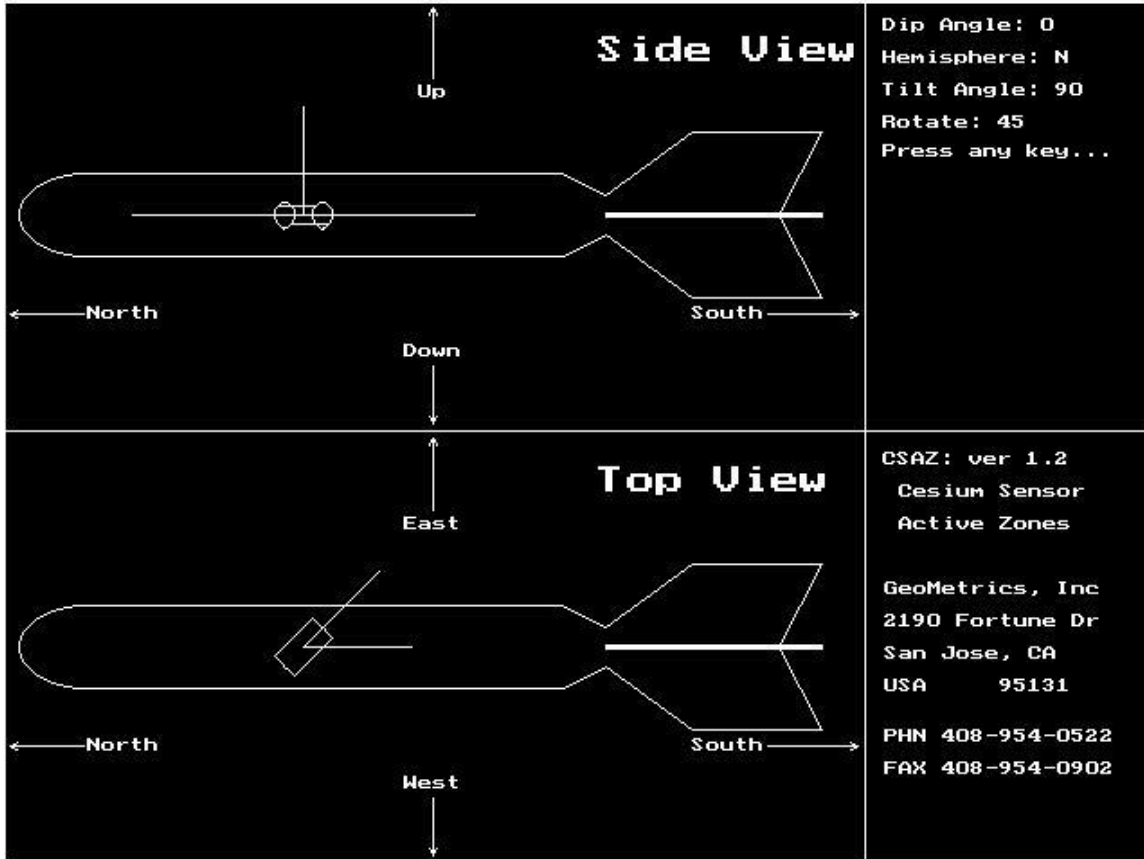


Figure 5.

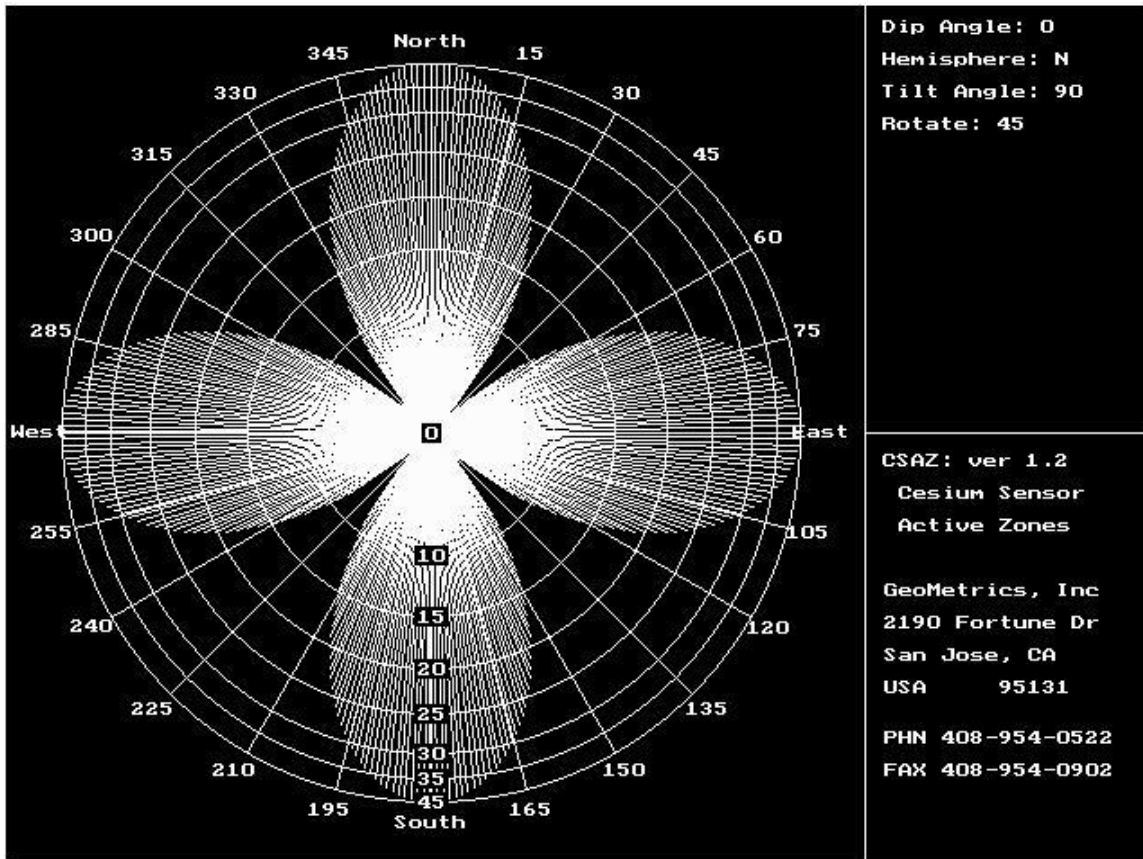


Figure 6.

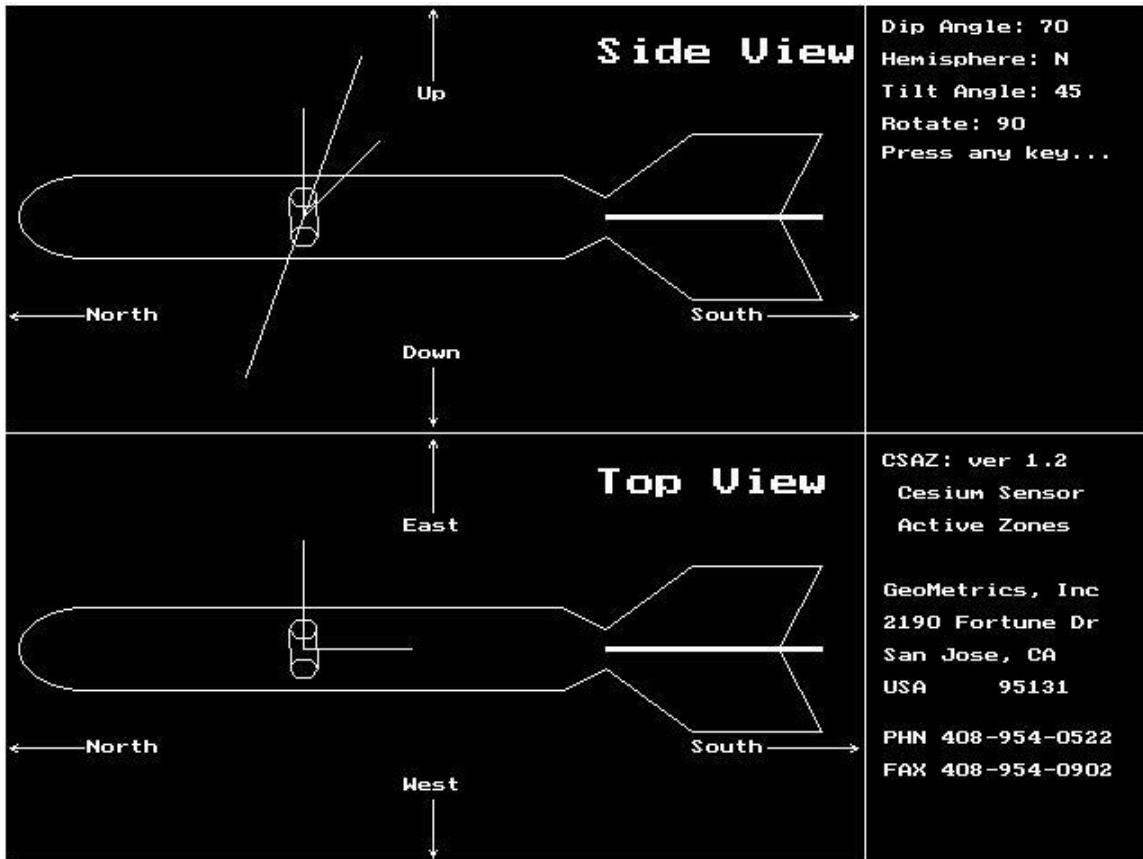


Figure 7.



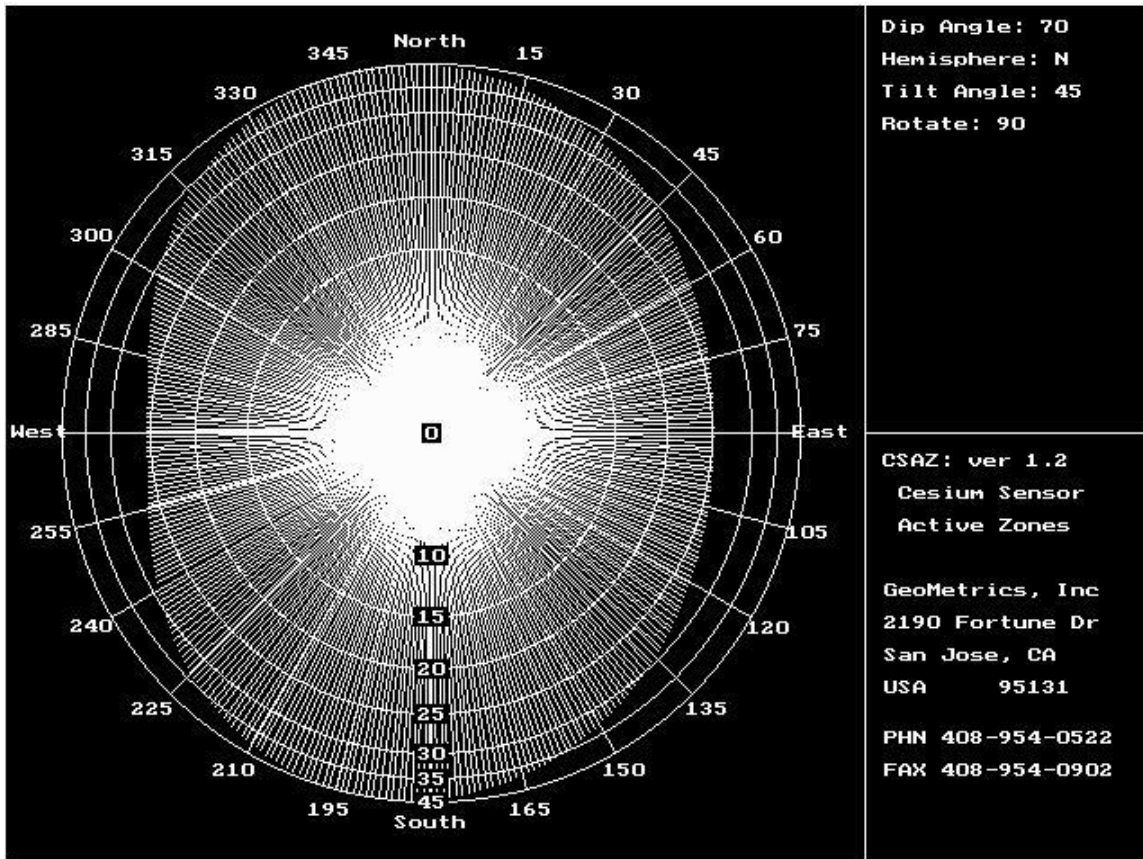


Figure 8

## Appendix 3: Advanced Information

This information is supplied for those interested in some of the more technical aspects of the G-858. Look in this chapter for some answers to frequently-asked-questions.

### Memory Usage

Inside the G-858, readings and positions (Marks and Lines) are simply stored sequentially, with a time stamp. The MagMap program will put the first reading following a mark exactly at that mark. The last reading before a Line event will be placed at that position.

Readings average about 3 bytes each, and positions about 10 bytes. GPS strings average about 30 bytes per reading. There is 1 Mbyte of memory in the standard unit, 2.5 MB in all units with the new CPU board that support 4 com ports. There is no limit to the memory used by each file.

Some memory is wasted by using additional files. Each new file must start on a 64K boundary. An average of 32K will be wasted, then, by opening each additional file.

### File Formats

The following information is supplied for those users who wish to perform manipulations on the data beyond that which MagMap is capable of. This section will explain the various file formats used in the data analysis process.

#### Binary File

This file has the .BIN extension, and is a raw dump of the data contained inside the memory of the G-858. This data is not stored in a user readable format. It is compressed in a manner unique to the requirements of the operation of the G-858. Furthermore, each new revision of the G-858 firmware may cause changes in this file format. Do not attempt to modify files of this type.

#### ASCII File

This file has the .STN extension, and is in a user-readable format. This file is created by the program BINTOASC.EXE. This program is run with the default parameters from the MagMap program. It may also be run directly from the DOS prompt, and given many options which will adjust the format of the output. Please see the section later in this appendix describing the operation of BINTOASC.

The ASCII file contains lines which are a record of events from the perspective of the G-858. Events may be either magnetometer readings, MARK, END LINE, or PAUSE key presses, RS232 input strings, or field notes. Each event is recorded in the order it was received, and given a time stamp.

---

**Note:** The ASCII file lists these events backwards in time, i.e., last-in-first-out.

---

Each line in the ASCII file starts with a number, referred to as the TYPE in the following discussion. The TYPE indicates what information follows. The table below shows the TYPE for each of the events.

TYPE	Event
0	Magnetometer Reading
3	Position Event
6	Discontinuity Event
9	PAUSE key press
12	UNPAUSE key press
21	RS232 string
33	Field note

Positions events and discontinuities are caused by MARK or END LINE key presses. Typically, a discontinuity event is associated with the beginning of a line.

The C-program lines which BINTOASC uses to create these files are shown below.

#### TYPE 0: Magnetometer Readings

```
fprintf(pAscFile, "%-2u %10.31f %10.31f %.2d:%.2d:%.2d.%.2d
%.2d/%.2d/%.2d %3u\r\n",
    type, // 0 in this case
    reading1, // reading from sensor 1 (front connector)
    reading2, // reading from sensor 2
    hours, // time of day
    minutes,
    seconds,
    hundredths,
    month, // date
    day,
    year,
    status ); // G-858 internal information.
```

Example:

```
0 49881.953 49874.396 11:02:08.60 06/01/95 0
```

#### TYPE 3: Position events.

```
fprintf(pAscFile, "%-2u %12.21f %12.21f %.2d:%.2d:%.2d.%.2d
%.2d/%.2d/%.2d %10ld %11ld %11ld %3u\r\n",
    type, // 3 in this case
    x_position, // X coordinate
    y_position, // Y coordinate
    hours, // time of day
    minutes,
    seconds,
    hundredths,
    month, // date
    day,
    year,
    Number_of_Readings, // Number of readings since last position or
    // discontinuity
    Line, // Line number
    Station, // Mark Number
    Status ); // G-858 internal information.
```

Example: (some blanks omitted to fit onto a single line)

```
3 26.00 0.00 11:02:08.70 06/01/95 168 13 0 5
```

**TYPE 6: Discontinuity events.**

```
fprintf(pAscFile, "%-2u %12.21f %12.21f %.2d:%.2d:%.2d:%.2d
%.2d/%.2d/%.2d %10ld %11ld %11ld %3u %10ld\r\n",
    type,                // 6 in this case
    x_position,          // X coordinate
    y_position,          // Y coordinate
    hours,               // time of day
    minutes,
    seconds,
    hundredths,
    month,               // date
    day,
    year,
    Number_of_Readings, // Number of readings since last position
    Line,                // Line number
    Station,             // Mark Number
    Status,              // G-858 internal information.
    Positions );        // Number of positions since last discontinuity
```

Example: (some blanks omitted to fit onto a single line)

```
6      26.00      0.00 11:02:08.70 06/01/95      168      13      0      5      3
```

**TYPE 9: Pause event**

```
fprintf(pAscFile, "%-2u %.2d:%.2d:%.2d:%.2d %.2d/%.2d/%.2d\r\n",
    type,                // 9 in this case
    hours,               // time of day
    minutes,
    seconds,
    hundredths,
    month,               // date
    day,
    year );
```

Example:

```
9 18:49:44.90 05/31/95
```

**TYPE 12: Unpause event**

```
fprintf(pAscFile, "%-2u %.2d:%.2d:%.2d:%.2d %.2d/%.2d/%.2d\r\n",
    type,                // 12 in this case
    hours,               // time of day
    minutes,
    seconds,
    hundredths,
    month,               // date
    day,
    year );
```

Example:

```
12 18:49:44.90 05/31/95
```

**TYPE 21: RS232 event**

```
fprintf(pAscFile, "%-2u %s %.2d:%.2d:%.2d.%.2d %.2d/%.2d/%2.2d /4d%
/1d%\r\n",
    type, // 21 in this case
    input_string, // ASCII string received from RS232
    hours, // time of day
    minutes,
    seconds,
    hundredths,
    month, // date
    day,
    year
    fine time //increments of 0.25ms, set to zero every
    0.1sec
    com ) ; //com port from which this data string is
    received, 0=COM1, 1=COM2, etc.
```

**Example:**

```
21 $GPGGA,015009.00,3725.9975,N,12209.9992,W,2,4,002.5,00025.1,M,-
028.4,M,001,0000*65 18:49:44.90 05/31/95 0.25 0
```

**TYPE 33: Field note**


```
fprintf(pAscFile, "%-2u %s %.2d:%.2d:%.2d.%.2d %.2d/%.2d/%2.d\r\n",
    type, // 33 in this case
    input_string, // ASCII string received from RS232
    hours, // time of day
    minutes,
    seconds,
    hundredths,
    month, // date
    day,
    year ) ;
```

**Example:**

```
33 Fell down 18:49:44.90 05/31/95
```

## I/O Connector Pinout


There are 3 inputs on the I/O connector which simulate END LINE, MARK and ENTER key presses. Momentarily connecting the corresponding pin to pin 4 is equivalent to pressing the key on the keypad:

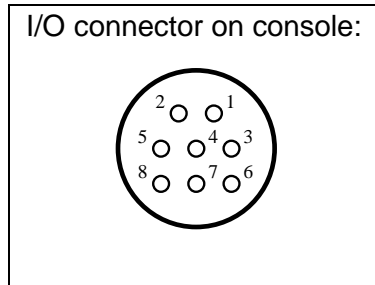

Pin Number	Function
1	Ground
2	RS232 Receive
3	RS232 Transmit
4	Ground
5	Mark
6	Audio
7	Line
8	Enter

## Power Connector Pinout

If more than COM1 serial port is to be logged, COM2, COM3 and COM4 are presented on the Power Connector.

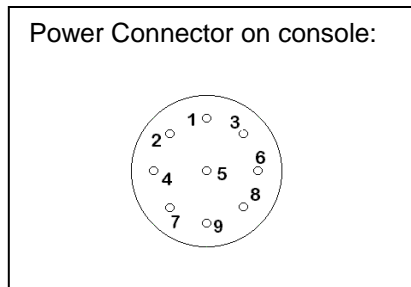

Pin Number	Function
1	+28V
2	+28V
3	COM4-RXD
4	COM3-RXD
5	COM2-RXD
6	COM3-TXD
7	COM2-TXD
8	GROUND
9	GROUND

Some care needs to be exercised in the design of the external cables. The G858's COM1 connector's ground pin is internally connected to the ground on the power connector. If the external cables also connect COM1 connector's ground to the power connectors ground, a loop will result. This loop will appear as a shorted turn of copper wire to the EM-61. Depending on the cross section of this loop it may affect the data from the EM-61. Also, if a substantial part of the G858's battery current finds its return path through the COM1 cable, a magnetic field will be produced. This magnetic field could affect the data when the G858 is working as a magnetometer.

We have found that building a 100 ohm resistor into the return wire of the COM1 RS232 cable prevents such problems. Simply omitting the return connection in the COM1 cable will also work, but this can cause confusion when the system is being tested, because two cables must be connected before the COM1 RS232 connections are complete.

### Field Notes

You may extract the field notes into a file in much the same manner as extracting GPS data (see Chapter 9). This is done by using the BINTOASC program with options to tell it to only extract the field notes.

Type the following line at the command prompt:

```
BINTOASC input.bin output.txt -R0 -M0 -D0 -P0 -U0 -S0
```

where

*input* is the name of the file containing the binary downloaded data (you must type the .BIN extension

*output* is the filename you wish for the GPS data (you must give it an extension. The TXT extension is a suggestion, however, you may use what you wish.)

-R0 . . . The options tell the program not to extract everything except the field notes. They are a dash, a letter, and the numeral zero.

You will now have created a file of the field notes, along with some G-858 formatting information. Lines will be as shown below:

```
33 Fell into a hole 10:59:14.80 06/01/95
33 Ran into a tree 11:16:25.40 06/01/95
33 Fell into a hole 12:01:36.80 06/01/95
```

Please contact Geometrics for information regarding availability of programs which automate usage of these features.

### EM-61 Data

The data from the Geonics EM-61 consists of two numbers and a gain code. The new G858 software allows this data to be taken from the COM1 serial port and used in place of the magnetometer readings.

Since the numbers from the EM-61 can be both positive and negative, but the G858 software was designed for magnetic fields, which can never be negative, the EM-61 values are adjusted to make them appear in the normal range of magnetic readings. To do this, the numbers are corrected for the gain code, multiplied by 4/125 and then added to 50000.

The readings will span:

$$50000 - 15.000 * 32768 * 4/125 = 34271.36$$

$$50000 + 15.000 * 32767 * 4/125 = 65728.16$$

To convert these back to normal EM-61 values you simply calculate:

$$Y = 4(X-50000)/125$$

Where:

X is the reported value in nT

Y is the correct EM-61 value

MagMap2000 does not yet contain this calculation.

When using the G858 to log EM-61 data you may notice that the displayed numbers move in a more stepwise manner than it does when recording magnetic fields. This is normal. The EM-61 reports a 16 bit integer for its reading. When these are multiplied by the correct factors for each of the gains this causes the resulting values to move in increments as shown below.

$$15.0000 * 4/125 = 0.480$$

$$0.7500 * 4/125 = 0.024$$

$$3.7500 * 4/125 = 0.120$$

$$0.1875 * 4/125 = 0.006$$



## SYSTEM SPECIFICATIONS

### MAGNETOMETER / ELECTRONICS

**Operating Principle:** Self-oscillating split-beam Cesium Vapor (non-radioactive CS-133).

**Operating Range:** 18,000 to 95,000 nT ( $\gamma$ )

**Operating Zones:** For highest signal-to-noise ratio, the sensor long axis should be oriented at  $45^\circ$ ,  $\pm 30^\circ$  to the earth's field angle, but operation will continue through  $45^\circ$ ,  $\pm 35^\circ$ . Sensor is automatic hemisphere switching.

**Sensitivity:** 90% of all readings will fall within the following P-P envelopes:

0.05 nT at 0.1 sec cycle rate (SX=0.160nT)

0.03 nT at 0.2 sec cycle rate (SX=0.113nT)

0.02 nT at 0.5 sec cycle rate (SX=0.072nT)

0.01 nT at 1.0 sec cycle rate (SX=0.051nT)

**Information Bandwidth:**  $< 0.004 \text{ nT } (\gamma) / \sqrt{\text{Hz}} \text{ RMS}$

**Heading Error:**  $< \pm 0.5 \text{ nT } (\gamma)$

**Temperature Drift:** 0.05 nT per degree C

**Gradient Tolerance:**  $> 500 \text{ nT } (\gamma) / \text{inch } (> 20,000 \text{ nT } (\gamma) / \text{meter})$

**Cycle Rate:** Variable from 0.1 sec to 1 hr in 0.1 sec steps or by external trigger.

**Data Storage:** Non-volatile RAM with capacity for 8 hrs of Magnetometer time, event marks, location, or 3 hrs of Gradiometer and GPS at maximum sample rates.

**Audio Output:**

1. Audio tone of earth's field variation, pitch and volume adjustable. (Search)

2. Audio pulse each 1 second (Pace metronome).

3. Alarm for loss of signal, noise in signal (QC) or low battery.

**Data I/O:** RS-232 standard bidirectional serial port, selectable continuous real time data transmission via RS-232 to PC. Memory dump transfer time less than 5 min at 115Kbaud transmission rate.

**Visual Output:** Micro-controller driven, 320 x 200 graphic liquid-crystal display, daylight visible with selectable outputs for:

1. Data display: Up to 5 stacked profiles, real time or review mode. Map of survey grid with zoom functions.
2. All system set-up functions, e.g., memory status, data transfer, sample time.
3. All Survey set-up functions, e.g., survey profile number and direction, station or GPS number,
4. Survey monitoring functions, e.g. total field, noise level, profile number x or xy coordinates.

**Internal Clock:** Resolution of 0.1 sec, drift:  $< 1 \text{ sec/day}$

**Power:** 1.24 VDC rechargeable gel cell, 6 hrs Magnetometer or 3 hrs Gradiometer usage. Magnetic effect less than 1 nT ( $\gamma$ ) at 3 ft.

2. Internal backup battery for clock and non-volatile RAM.

**External power input** 22 to 34 VDC, 1 amp on turn-on, 600ma operating in magnetometer mode.

**Software:** Supplied as part of the basic system for installation in the Geometrics or client-supplied PC, and including functions for:

**Operating Software:**

1. Survey Modes:
  - a. Search
  - b. Simple survey, station or continuous
  - c. Map survey, station or continuous
  - d. Base station
2. Data acquisition/display:
  - a. Acquire and store data and survey functions.
  - b. Display profiles, total field to 0.1 nT resolution, gradient (differential) to 0.1 nT, survey/map parameters and diagnostics.
  - c. Map display showing location of all readings.

**PC Support Software:**

1. Data transfer and corrections:
  - a. Transfer of data from the field Magnetometer, Gradiometer, GPS, or Base station to the PC.
  - b. Diurnal correction using base station data.
  - c. Processing the corrected data into ASCII values of X-Y-Z for the magnetometer and/or X-Y-Z<sub>1</sub>-Z<sub>2</sub>-Z<sub>3</sub> for the gradiometer.
2. Optional bundled "Surfer for Windows" by Golden. Provides data presentation/plotting into a contour map or 3D isomagnetic map with Text annotation and color blends.

### MECHANICAL

**Sensor:** 2-3/8" dia., 6-3/4" long, 12 ounces  
6 cm x 15 cm, 340 g

**Console:** 6" W, 3" H, 11" L, 3.5 lbs. (15 cm x 8 cm x 28 cm, 1.6 kg), attaches to harness. Magnetic effect less than 1 nT ( $\gamma$ ) at 3 ft

**Battery:** 3" H, 5" W, 8" L, 3.5 lbs (8 cm x 13 cm x 20 cm, 1.6 kg) attaches to harness.

**Staff/Harness:** Staff for Magnetometer or Gradiometer, 1.5 lb to 2.5 lb (0.9 kg to 1.1 kg)

Nylon chest harness with cables attached, 2 lb to 3 lb (1 kg to 1.3 kg)

### ENVIRONMENTAL

**Operating Temperature:**  $-15^\circ\text{C}$  to  $+50^\circ\text{C}$  ( $-13^\circ\text{F}$  to  $+122^\circ\text{F}$ )

**Storage Temperature:**  $-35^\circ\text{C}$  to  $+60^\circ\text{C}$  ( $-30^\circ\text{F}$  to  $+140^\circ\text{F}$ )

**Water Tight:** To 1 ft (0.3 m) depth for 10 seconds.

**Shock:** Drop 3 ft on a hard surface without damage

## Index

- Acquire state, 55
- Adjust menu
  - search mode, 26
  - simple survey, 33
- Applications, 2
- Assembly, 7
- Audio setup, 78
- Base station mode, 3, 63
- Batteries
  - charging, 14
- Battery
  - Lithium, 20
- Belt, 11
- Charger, 14
- Chart, 37
- Chart display, 66
- Clock test, 24
- Connectors, console, 10
- Console, 10, 11
- Data
  - acquisition, 44
  - positioning, 55
  - transfer, 69
- data display
  - mapped mode, 48
- Data editing
  - mapped mode, 50
- Data Review, 65
- Data review menu, 68
- Date, 18
- Deleting a file, 71
- Deleting data
  - simple survey, 35
- Display test, 24, 80
- Diurnal correction, 86
- Editing data
  - simple survey, 35
- Editing data, mapped mode, 50
- Enter key, 17
- Erasing a file, 71
- ESC key, 17
- Features, 2
- Field notes, 104
- Field Notes, 74, 81
- File formats, 99
- Files
  - deleting, 71
- Format memory, 24, 71
- Function calls, 16
- Gradiometer, 21
- Grid, re-defining, 59
- Harness, 11
- I/O Connector, 103
- Item
  - selecting, 16
- Items, 16
- Jump buttons, 16
- Keypad test, 23, 80
- Keys
  - ENTER, 17
  - ESC, 17
- Line spacing, 41
- Lithium battery, 20
- Magnetometer test, 83
- Main menu, 19, 22
- Map display, 46
- Mapped survey, 39
- Mapped survey mode, 3
- Mark spacing, 41
- Memory test, 24
- Memory usage, 99
- Memory, formatting, 24, 71
- Menu
  - items, 16
- Menus, 16
  - Main menu, 19, 22
  - selecting items, 17
- Mode
  - search, 25
  - simple survey, 28
- Multi grid survey, 59
- Numeric entry field, 16
- Obstructions, 57
- Off switch, 14
- On / Off, 14
- Parts, 6
- Pause
  - simple survey, 34
- Pause state, 55
- Pinout
  - I/O connector, 103
- Positions, entering, 56
- Power key, 14
- Ready state, 55
- Real-time transfer, 63, 75
- RS232 Setup, 74, 81
- Scroll list, 16
- Search mode, 3
  - adjust menu, 26
- Search Mode, 25
- Selecting at item, 16
- Self test, 23, 80
- Sensor test, 83
- Serial port test, 24
- Setup, 18
- Simple survey, 28
  - acquiring data, 30
  - adjust menu, 33
  - editing data, 35
  - end of line, 31
  - main menu, 29
  - overview, 28
  - setup, 29
  - viewing data, 37
- Simple survey mode, 3
- Sound test, 23, 80
- Spreader bar, 10
- Staff, 9
- States, software, 55
- Survey
  - bi-directional, 40
  - mapped, setup, 39
  - uni-directional, 40
- Survey setup
  - mapped mode, 51
- Surveying
  - checklist, 4
- System setup, 18
- Test, self, 23, 80
- Time, 18
- Transferring data, 69
- Unpacking, 6
- Viewing data
  - simple survey, 37
- Wand, 9
- Wearing, 11